


170096 - Marano Mono mixer


| Useful Information | |
|----------------------------|---------|
| Minimum operating pressure | 0.3 bar |
| Maximum operating pressure | 5 bar |
| Guarantee Length | 5 Years |



Technical Diagram

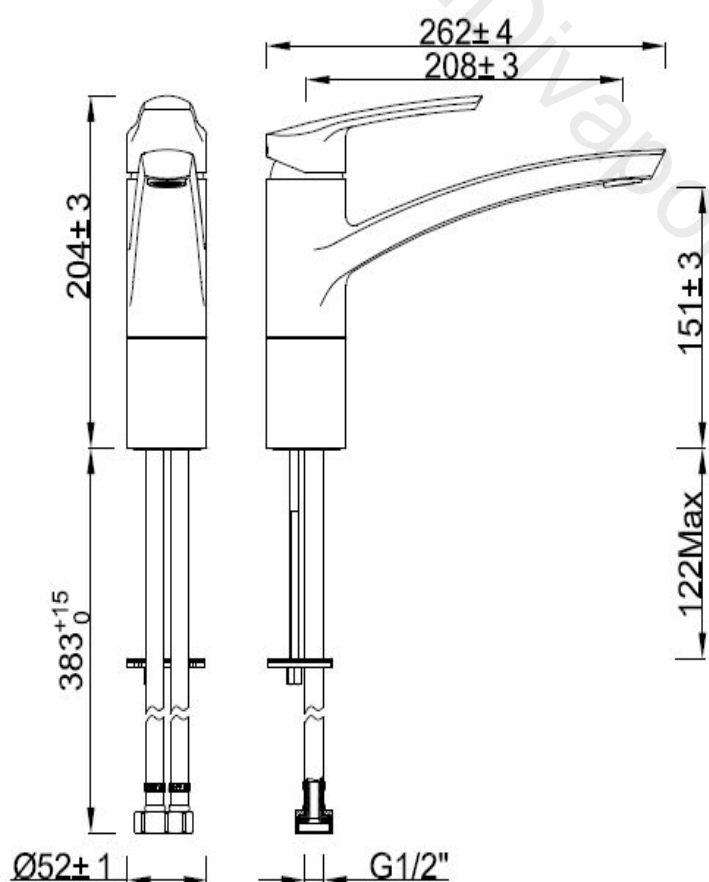

Exploded Diagram

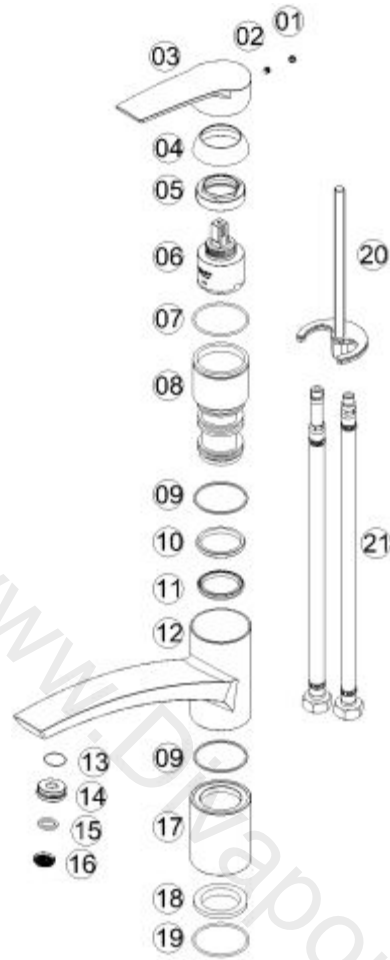

| Item Number | Suppliers Identification code | Item Description | Qty | Price (If purchased as a spare part) |
|-------------|-------------------------------|---------------------|-----|--------------------------------------|
| 1 | P71 | Indice | 1 | Yes |
| 2 | SC5-4SN | Screw | 1 | Yes |
| 3 | 177004-H | Handle | 1 | Yes |
| 4 | 177004-S | Valve Cover | 1 | Yes |
| 5 | 177033-N1 | Cartridge Clamp | 1 | Yes |
| 6 | 40D-1 | Cartridge Assembly | 1 | Yes |
| 7 | OR152 | O Ring | 1 | No |
| 8 | 107005-N1 | Valve Seat | 1 | No |
| 9 | M4102-02-01 | Washer | 2 | No |
| 10 | M4102-02-02 | Washer | 1 | No |
| 11 | OR035 | Y Type Sealing Ring | 1 | No |
| 12 | 177004-01 | Tap Body | 1 | No |
| 13 | OR055 | O ring | 1 | Yes |
| 14 | 177004-N2 | Adaptor | 1 | Yes |
| 15 | 102301-N | Washer | 1 | Yes |
| 16 | 01.5501.0.0001 | Aerator | 1 | Yes |
| 17 | 177004-N1 | Adaptor | 1 | No |
| 18 | 177004-N3 | Adaptor | 1 | No |
| 19 | OR050 | O ring | 1 | No |

| | | | | |
|----|-------------------|--------------------|---|-----|
| 20 | N247-B | Fixing kit | 1 | Yes |
| 21 | BZG10-1/2"-450-01 | Braided Connectors | 1 | Yes |

Flow Rates

www.Divapor.com

FAQ

What should I do if my tap is dripping/leaking?

Cleaning the valve (if water dripping from tap)

Before carrying out any maintenance, turn off the mains water supply. If unsure contact a qualified tradesman.

Remove the cap(a) from the handle(c), loosen the grub screw(b).

Remove the handle(c), cover(d).

Remove the retaining nut(e) using a suitable spanner, remove the cartridge and clean the cartridge(f) thoroughly under cold water to remove any build up of limescale or debris.

If necessary replace the cartridge(f).

Replace the cartridge(f) into the body, tighten the retaining nut(e) using a suitable spanner.

Replace the cover(d) and handle(c), tighten the grub screw(b) and re-fit cap(a) to handle.

What does the Guarantee Cover?

The Guarantee Covering leakage, manufacturing defects and Chrome plating.

The guarantee does not cover:

- Damage or defects caused by:
 - general wear and tear (including special non-chrome finishes; components such as filters, seals, 'O'rings and washers)
 - incorrect installation
 - repair using non- PPI parts
 - accidental or wilful misuse
 - corrosion and the use of inappropriate cleaning products.
 - system debris including the build up of limescale (which can be controlled through regular servicing and maintenance).
- Compensation for loss of use of the product or consequential loss of any kind.

