



99.520.031/ÄM 220063/02.11




ENJOY WATER[®]

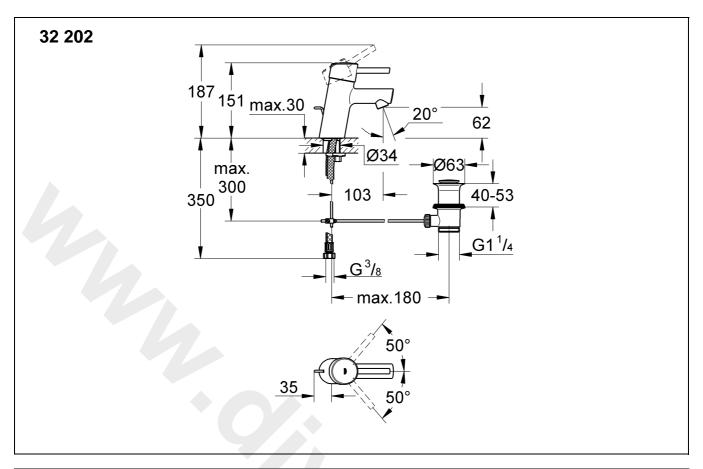

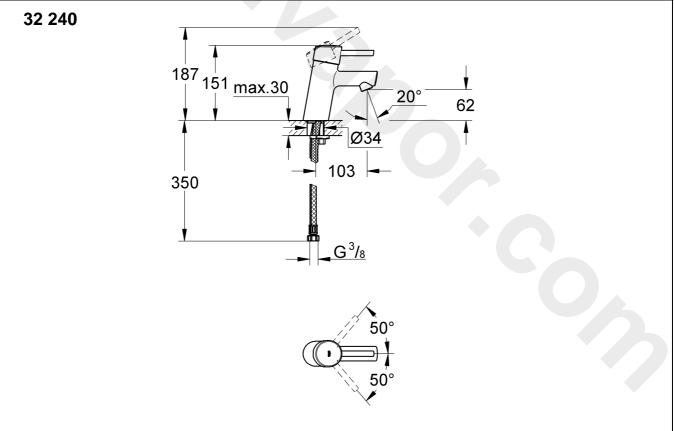

Please pass these instructions on to the end user of the fitting!

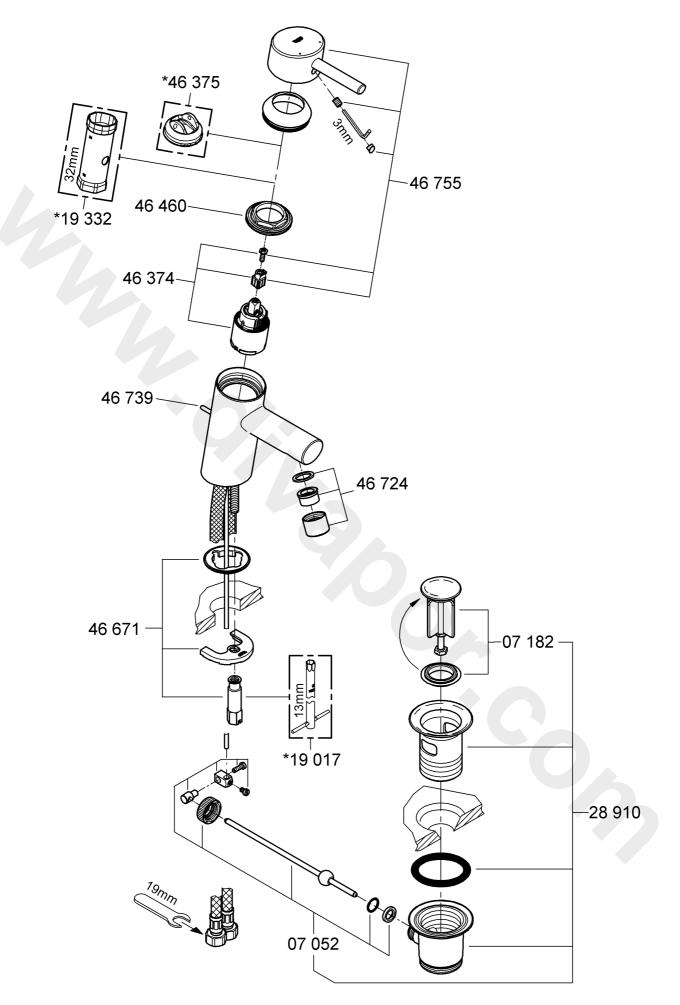



Application

Can be used in conjunction with: Pressurised storage heaters, thermally and hydraulically controlled instantaneous heaters. Operation with low-pressure displacement water heaters is not possible.

Specifications

- Minimum flow pressure 0.1 bar
- Maximum operating pressure 10 bar
- Test pressure
- If static pressure is greater than 5 bar, fit pressure reducer.

Avoid major pressure differences between cold and hot water supply.

- Flow rate at 0.1 bar flow pressure with flow straightener:
- approx. 3 l/min Temperature - Hot water inlet (maximum): - Recommended (energy saving): 60 °C
- Water connection

80 °C

16 bar

cold - right hot - left

Maintenance

Inspect and clean all parts, replace if necessary and grease with special grease.

Shut off cold and hot water supply!

I.Replacing the cartridge, see Fig. [5].

- 1. Lever out plug (B).
- 2. Remove set screw (C) using a 3mm allen key and pull off lever (D).
- 3. Pull off cap (E).
- 4. Turn out screwing (F) using a socket spanner 32mm.
- 5. Change complete cartridge (G).

Assemble in reverse order.

Observe the correct installation position!

Make sure that the cartridge seals engage in the grooves and the locating pins at the base of the cartridge slot into the apertures on the housing.

Screw in and tighten screwing (F).

II. Flow straightener, see fold-out page II. Unscrew and clean flow straightener (46 724).

Assemble in reverse order.

Installation

Flush piping system prior and after installation of fitting thoroughly (Consider EN 806)!

Installation and connection, see fold-out page III, Fig. [1] and [3].

Refer to the dimensional drawing on fold-out page I.

When assembling, the waste rod (A) has to be placed into the Dear Customer, body.

Fit pop-up waste set, see fold-out page III, Fig. [2]. Seal plug-hole rim.

The cold water supply must be connected on the right and the hot water supply on the left.

Open cold- and hot water supply and check connections for watertightness!

Check fitting for correct function, see Fig. [4].

Flow rate limiter

This mixer is fitted with a flow rate limiter, permitting an infinitely individual variable reduction in the flow rate.

The highest possible flow rate is set by the factory before dispatch.

The use of flow rate limiters in combination with hydraulic instantaneous water heaters is not recommended.

For commissioning see "replacing the cartridge" point 1 to 4, Fig. [5] and [6].


Replacement parts, see fold-out page II (* = special accessories).

Care

We want to ensure that you get long-lasting satisfaction and pleasure from your GROHE fitting. Therefore, please read the following care instructions because damage to the surface and underlying material resulting from improper treatment is not covered by warranty.

Do not use any abrasive sponges or scouring agents for cleaning. We also advise you not to use cleaning agents containing solvent or acid, limescale removers, household vinegar and cleaning agents with acetic acid in them. They are aggressive to the surface - and will leave your fitting dull and scratched. As the formulations of commercially available cleaning agents frequently change, we cannot guarantee they will provide the gentle care our fitting deserves.

Clean the fitting with a little soap and a moist cloth only, then simply rinse off and wipe dry. You can avoid lime spots by drying the fitting each time it is used. If lime deposits do occur, remove them with GrohClean, our environment-friendly cleaning liquid. GrohClean is specially formulated to clean the surface of our fittings gently. GrohClean is available from your supplier.

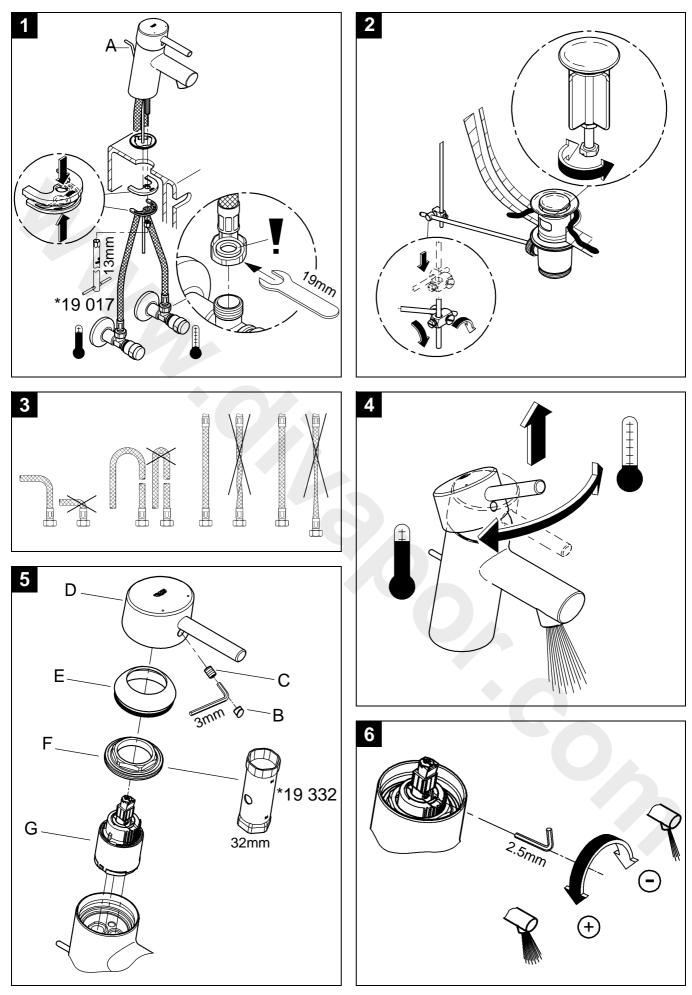

|||

Grohe Deutschland Vertriebs GmbH Zur Porta 9 32457 Porta Westfalica Tel.: +49 571 3989-333 Fax: +49 571 3989-999

(\mathbf{A})

GROHE Ges.m.b.H. Wienerbergstraße 11/A7 1100 Wien Tel.: +43 1 68060 Fax: +43 1 6884535

(\mathbf{B})

GROHE nv - sa Diependaalweg 4a 3020 Winksele Tel.: +32 16 230660 Fax: +32 16 239070

(BG)

Търговско представителство Grohe AG България Бизнес център Слатина Ул. Слатинска 1 1574 София Тел. : +359 2 9719959 +359 2 9712535 Факс.: +359 2 9712422

(CDN)

GROHE Canada Inc. 1230 Lakeshore Road East Mississauga, Ontario Canada, L5E 1E9 Tel.: +1 905 2712929 Fax: +1 905 2719494

(CH)

Grohe Switzerland SA Oberfeldstrasse 14 8302 Kloten Tel.: +41 44 8777300 Fax: +41 44 8777320

(CN)

高仪(上海) 卫生洁具有限公司 上海市黄陂北路227号 中区广场607-610室 电话: +86 21 63758878 传真: +86 21 63758665

(CY)

GROME Marketing (Cyprus) Ltd. 195B, Old Nicosia-Limassol Road Dhali Industrial Zone P.O. Box 27048 1641 Nicosia Tel.: +357 22 465200 Fax: +357 22 379188

(CZ)(SK)

Grohe ČR s.r.o. Zastoupení pro ČR a SR V Oblouku 104, Čestlice 252 43 Průhonice Tel.: +420 22509 1082 Fax: +420 22509 1085

www.grohe.com

(DK)

GROHE A/S Walgerholm 11 3500 Vaerløse Tel.: +45 44 656800 Fax: +45 44 650252

E

GROHE España S.A. C/ Botanica, 78 - 88 Gran Via L'H - Distr. Econòmic 08908 L'Hospitalet de Llobregat (Barcelona) Tel.: +34 93 3368850 Fax: +34 93 3368851

(EST) (LT) (LV)

GROHE AG Eesti filiaal Tartu mnt 16 10117 Tallinn Tel.: +372 6616354 Fax: +372 6616364

(F)

GROHE s.à.r.l. 60, Boulevard de la Mission Marchand 92400 Courbevoie - La Défense Tel.: +33 1 49972900 Fax: +33 1 55702038

(FIN)

Oy Teknocalor Ab Sinikellonkuja 4 01300 Vantaa Tel.: +358 9 8254600 Fax: +358 9 826151

(GB)

GROHE Limited Blays House, Wick Road Englefield Green Egham, Surrey, TW20 0HJ Tel.: +44 871 200 3414 Fax: +44 871 200 3415

(GR)

N. Sapountzis S.A. 86, Kapodistriou & Roumelis Str. 142 35 N. Ionia - Athens Tel.: +30 210 2712908 Fax: +30 210 2715608

H

GROHE Hungary Kft. Röppentyü u. 53. 1139 Budapest Tel.: +36 1 238 80 45 Fax: +36 1 238 07 13

(\mathbf{HR})

GROHE AG - Predstavništvo Štefanovečka 10 10000 Zagreb Tel.: +385 1 2989025 Fax: +385 1 2910962

(\mathbf{I})

GROHE S.p.A. Via Castellazzo Nr. 9/B 20040 Cambiago (Milano) Tel.: +39 2 959401 Fax: +39 2 95940263

(IND)

Grohe India Private Limited The Great Eastern Centre Gesco Corporate Centre 70 Nehru Place New Dehli 110019 Tel.: +91 11 5561 9423 / 9513 Fax: +91 11 5561 9451

BYKO hf. Skemmuvegi 2 200 Kópavogur Tel.: +354 515 4000 Fax: +354 515 4099

J

Grohe Japan Ltd. TRC Building, 3F 1-1 Heiwajima 6-chome, Ota-ku Tokyo 143-0006 Tel.: +81 3 32989730 Fax: +81 3 37673811

$\overline{\mathbf{N}}$

GROHE A/S Nils Hansens vei 20 0667 Oslo Tel.: +47 22 072070 Fax: +47 22 072071

NL

GROHE Nederland BV Metaalstraat 2 2718 SW Zoetermeer Tel.: +31 79 3680133 Fax: +31 79 3615129

P)

GROHE Portugal Componentes Sanitários, Lda. Rua Arq. Cassiano Barbosa, 539 1.° Frente Esquerdo 4100-009 Porto Tel.: +351 22 543 29 80 Fax: +351 22 543 29 99

PL

GROHE Polska Sp. z.o.o. Pulawska 182 Street 02-670 Warszawa Tel.: +48 22 5432 640 Fax: +48 22 5432 650

RUS

Представительство Grohe AG Москва,ул.Русаковская 13,стр.1 1107140 тел.: +7 495 9819510 факс: +7 495 9819511

RO

Grohe AG Reprezentanta Strada Nicolae lorga 13, Corp B 010432 Bucuresti (Sector 1) Tel.: +40 21 2125050 Fax: +40 21 2125048

S

GROHE A/S Kungsängsvägen 25 753 23 Uppsala Tel.: +46 771 141314 Fax: +46 771 141315

(SLO)

GROSAN inženiring d.o.o. Slandrova 4 1000 Ljubljana Tel.: +386 1 5633060 Fax: +386 1 5633061

(TR)

GROME Ic ve Dis Ticaret Ltd. Sti. Bagdat Cad. Ugras Parlar Is Merkezi No: 605, B Blok D: 12 - 15 34846 Cevizli - Maltepe-Istanbul Tel.: +90 216 4412370 Fax: +90 216 3706174

(UA)

Представництво Grohe AG в Україні Вул. Івана Франка, 18-А 01030 Київ тел.: +38 044 537 52 73 факс: +38 044 590 01 96

(USA)

GROHE America Inc. 241 Covington Drive Bloomingdale Illinois, 60108 Tel.: +1 630 5827711 Fax: +1 630 5827722

Eastern Mediterranean Middle East - Africa

Area Sales Office: GROME Marketing (Cyprus) Ltd. 195B, Old Nicosia-Limassol Road Dhali Industrial Zone P.O. Box 27048 1641 Nicosia Tel.: +357 22 465200 Fax: +357 22 379188

Far East Area Sales Office: GROHE Pacific Pte. Ltd. 438 Alexandra Road # 06-01/04 Alexandra Point Singapore 119958 Tel.: +65 6376 4500 Fax: +65 6378 0855



ENJOY WATER®