





Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb /
Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu

XX = AA, AD,..



Position

- 1 = A 962 068 XX
- 2 = A 963 667 NU
- 4 = A 961 485 XX
- 5 = A 961 667 NU (2x)
- 7 = A 962 715 NU
- 8 = A 963 372 NU
- 9 = A 960 145 NU
- 11 = A 960 412 NU
- 12 = A 963 157 NU (2x)
- 13 = A 963 153 XX
- 14 = A 960 205 NU
- 16 = A 963 287 AA
- A 962 594 NU (2x)
- 17 = H 960 185 NU
- 19 = H 960 440 XX
- 20 = A 962 061 XX
- 21 = A 960 239 NU
- 22 = B 960 578 XX
- 23 = A 3333 XX

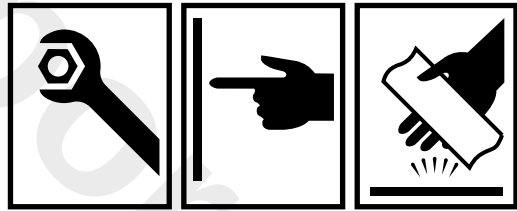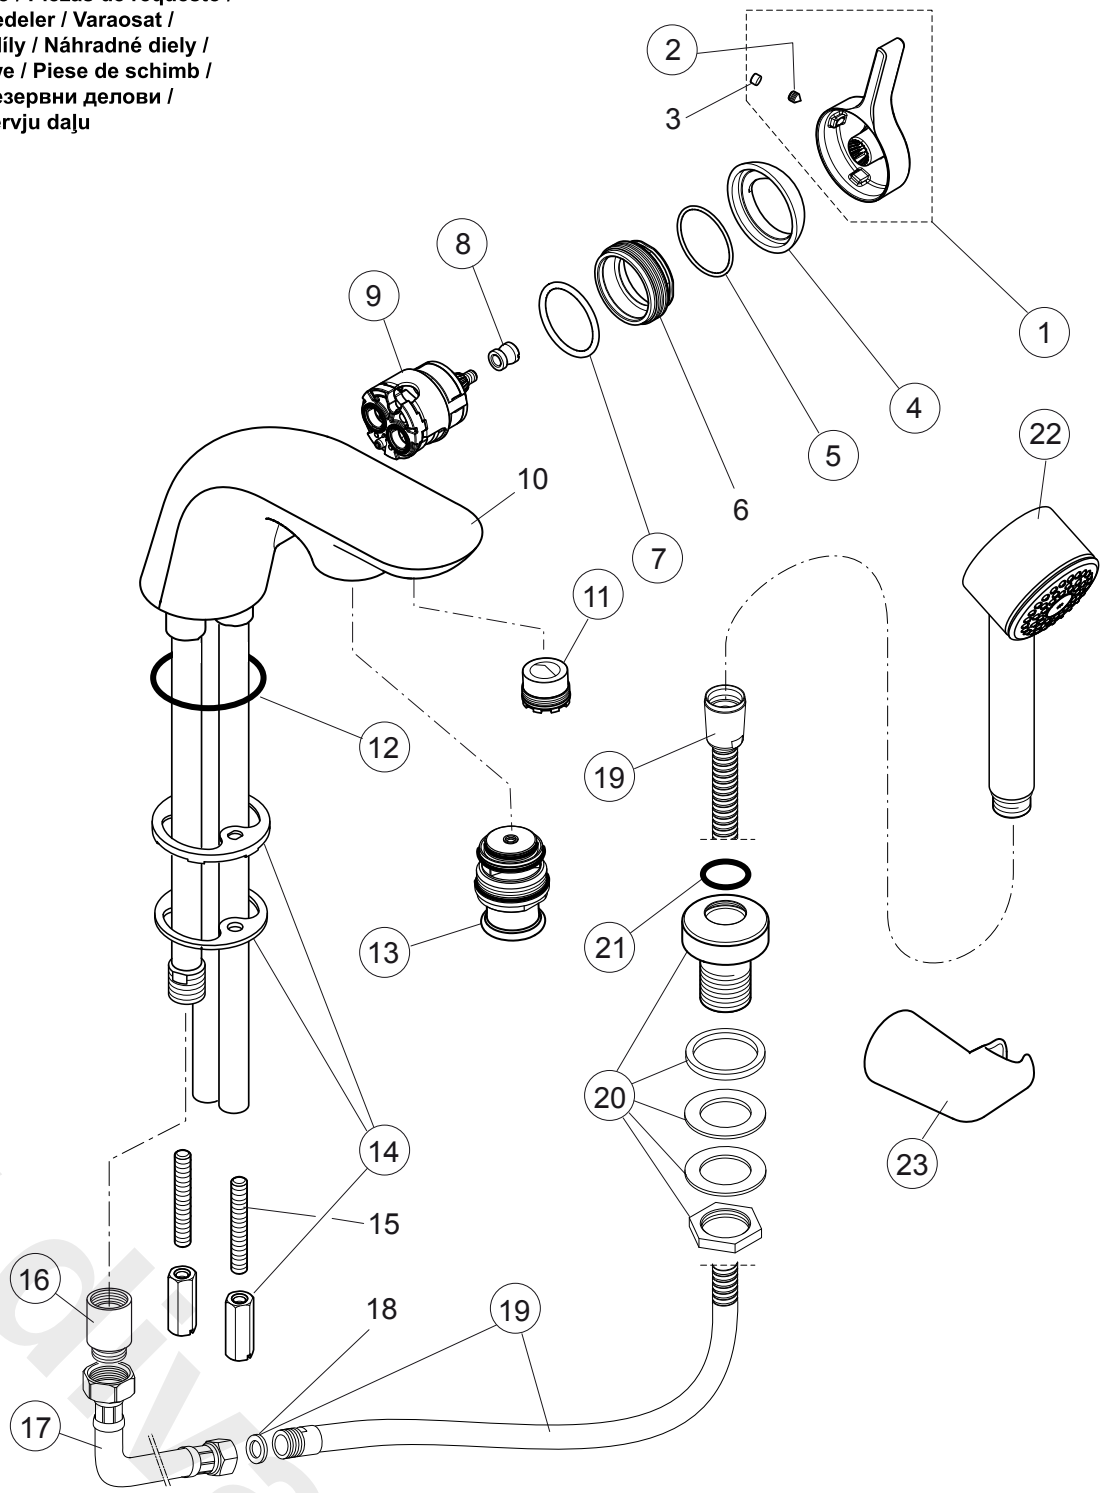


MELANGE
A 4278 ..





0811/ A 865 832
(+ A 865 612)

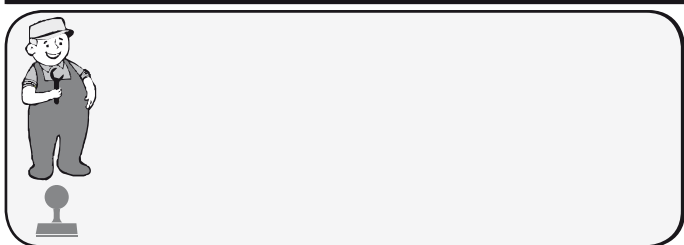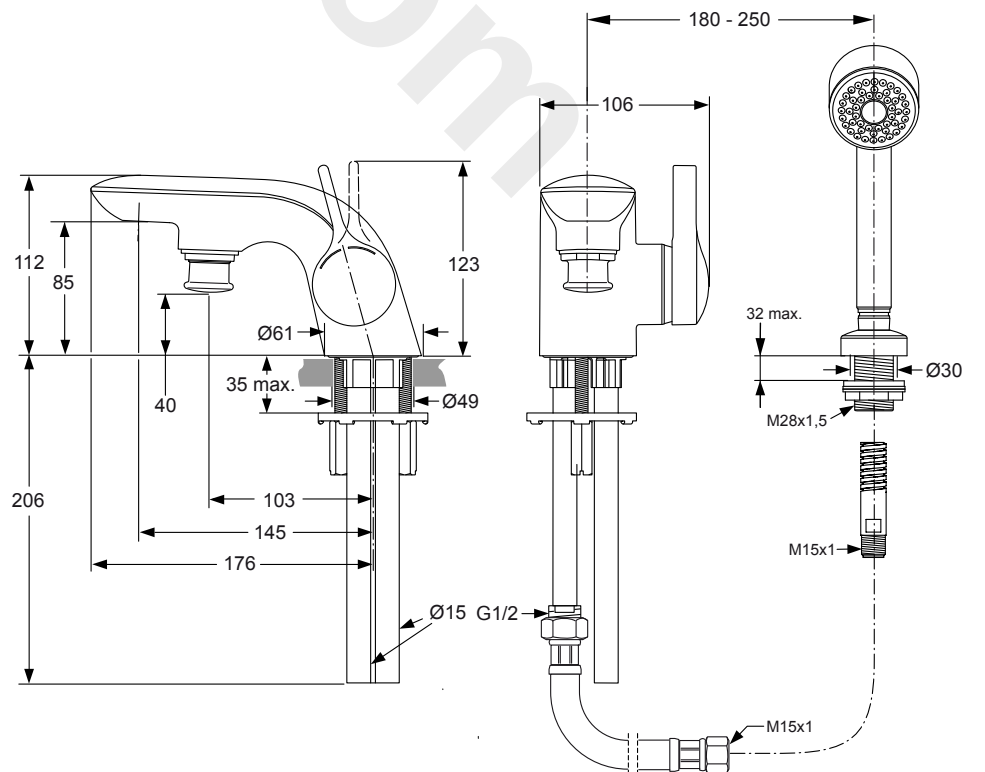

Ideal Standard International BVBA
Chaussée de Wavre, 1789 - box 15
1160 Bruxelles
Belgium

www.idealstandardinternational.com

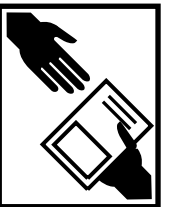

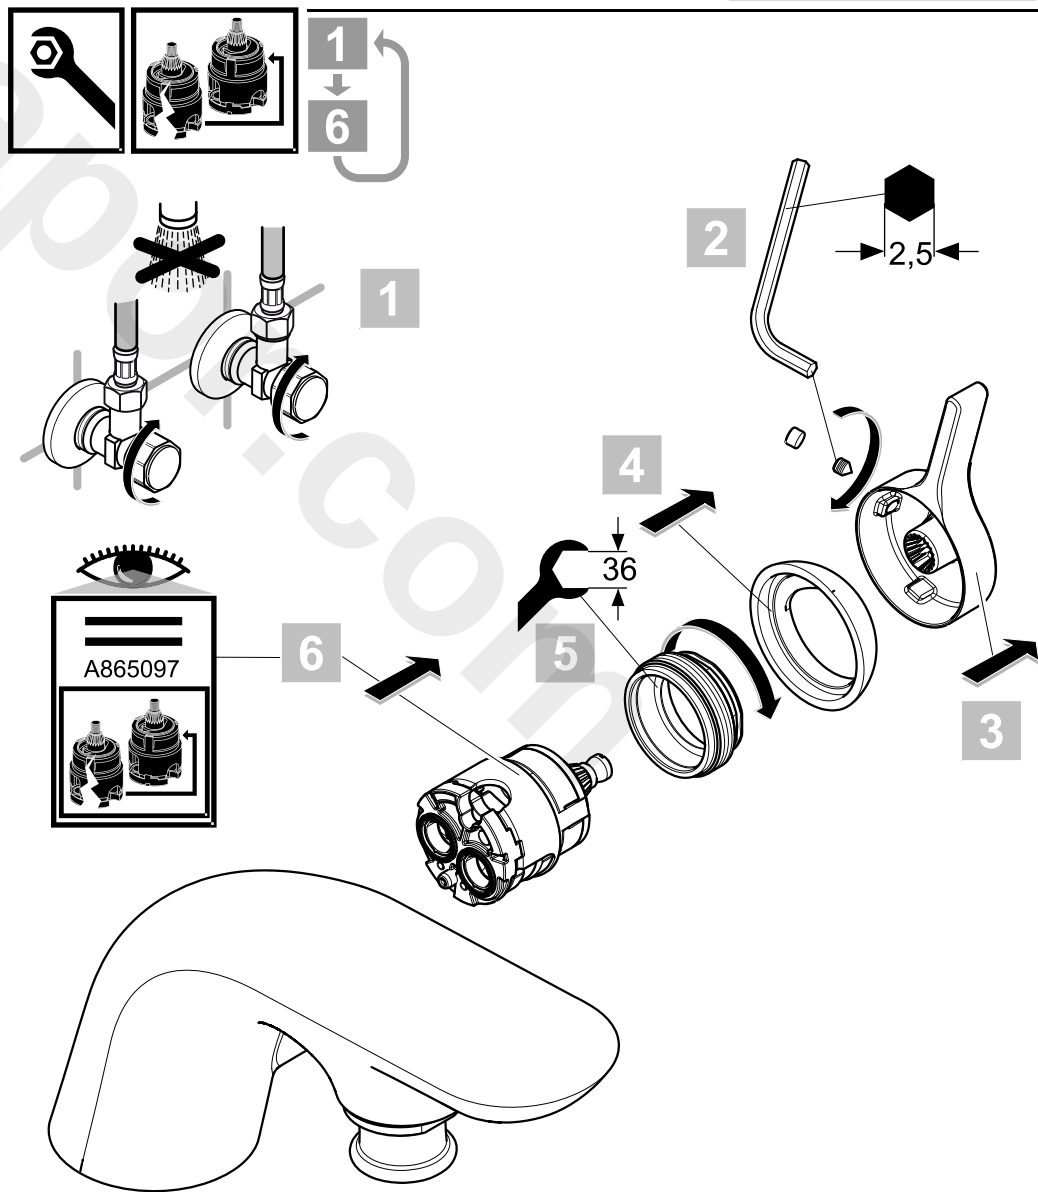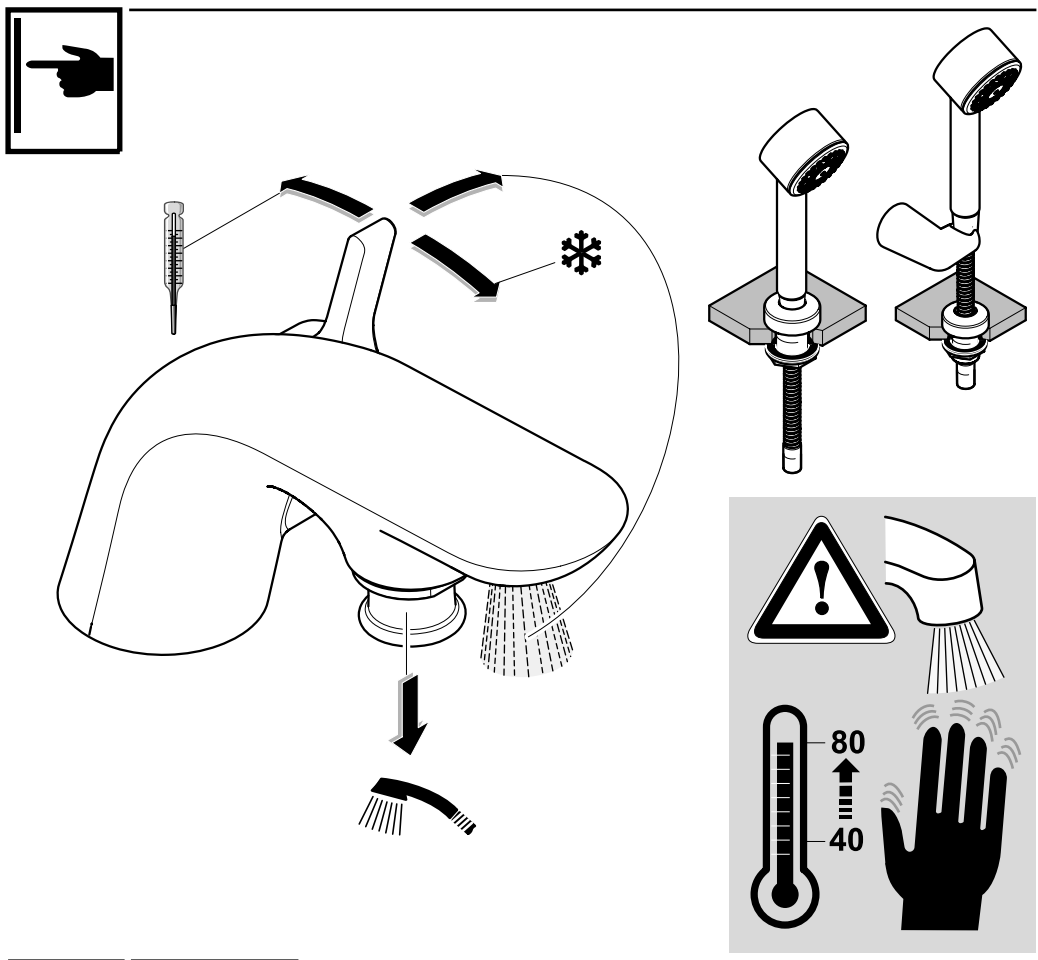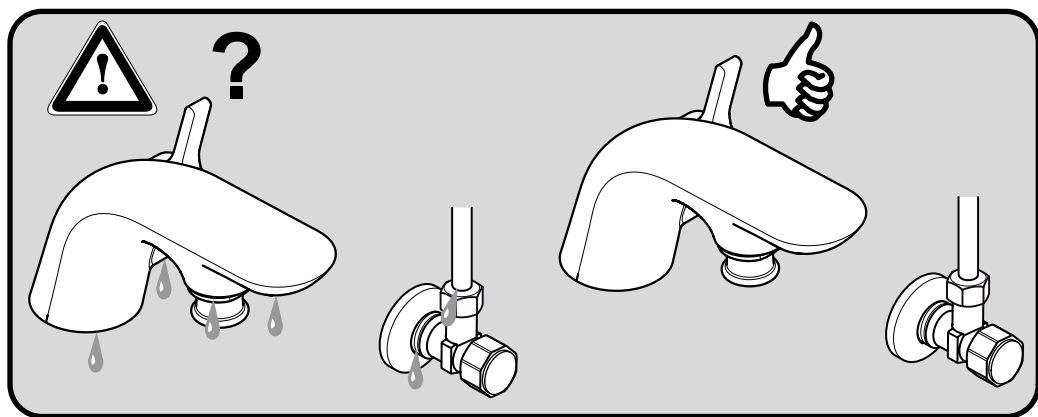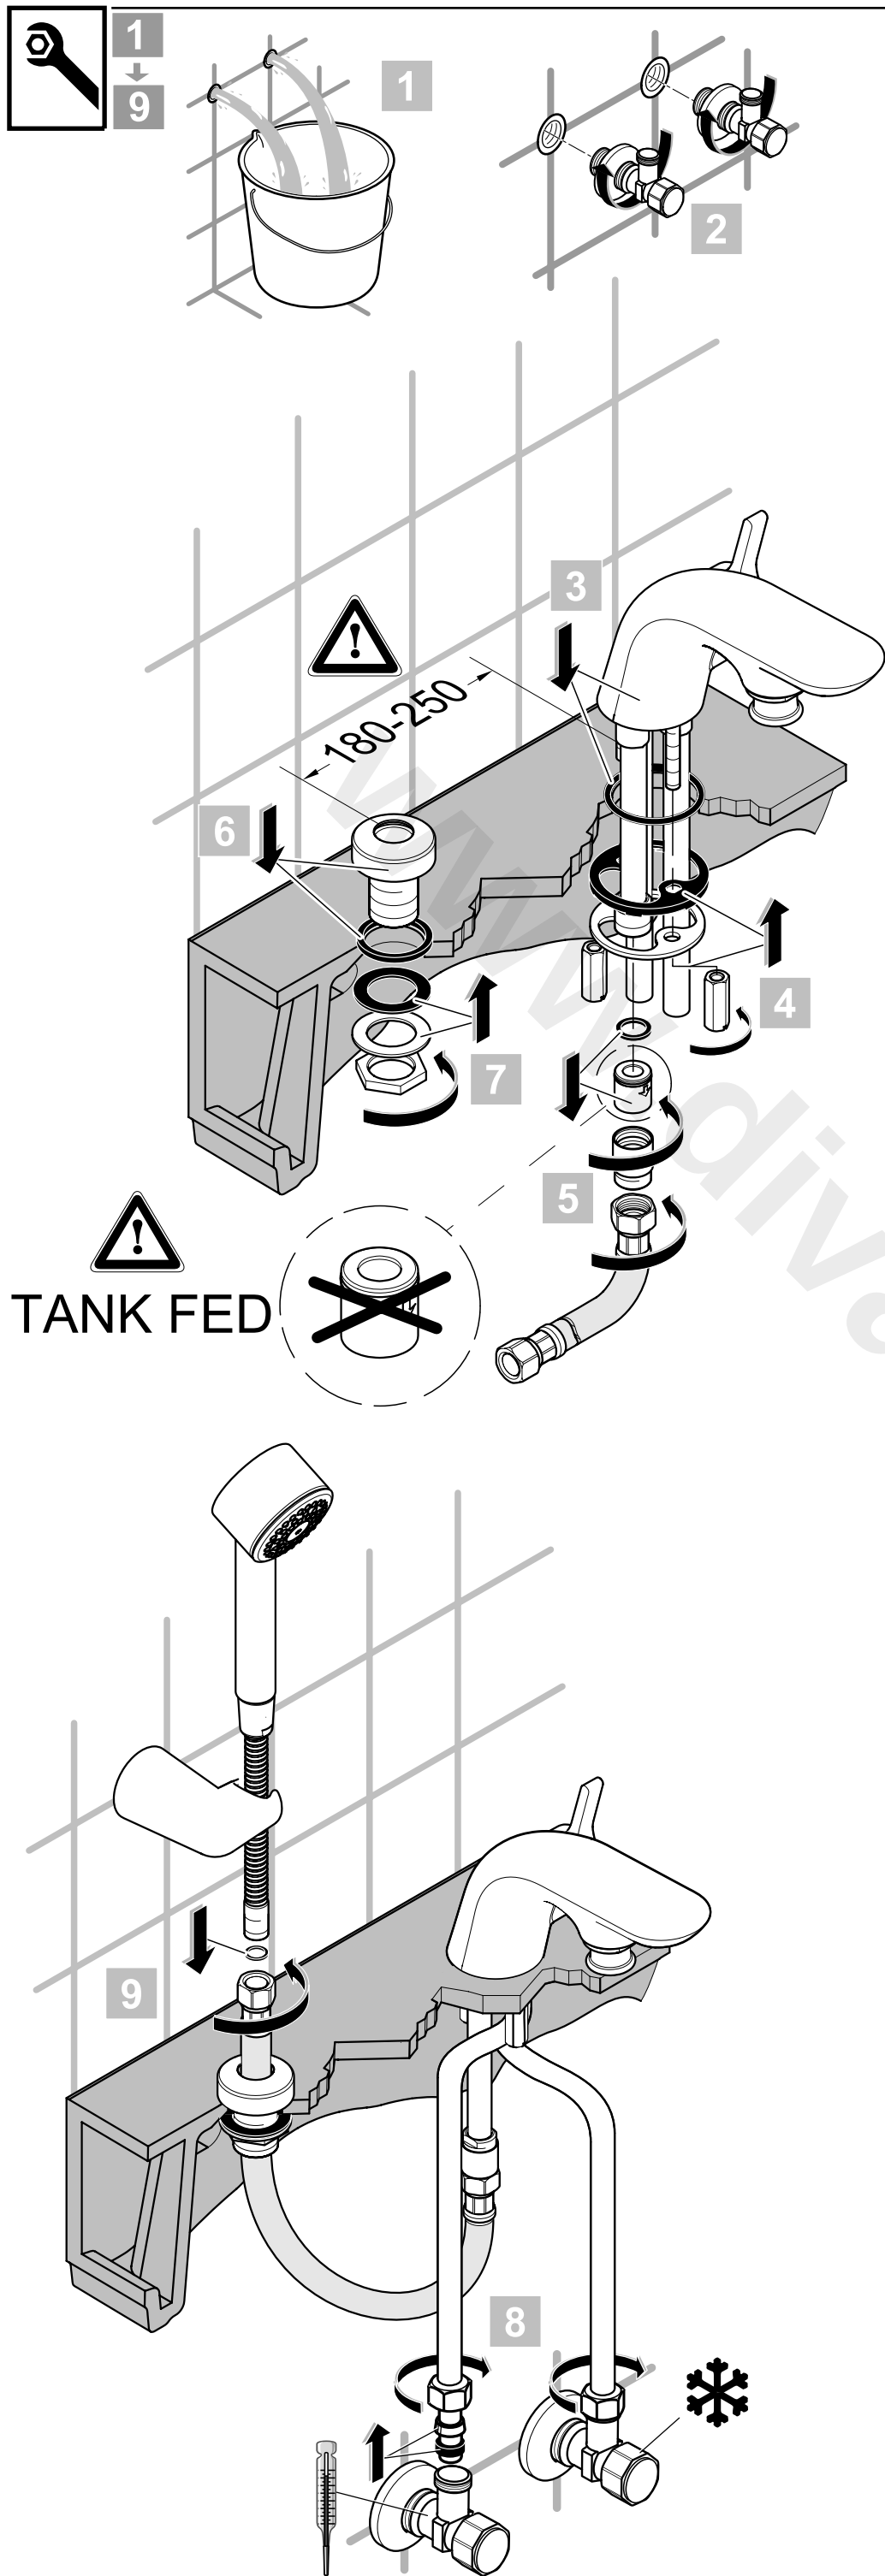

	p	bar		MAX. 10		5		Q (3 bar)
	T	°C		MAX. 80°		65°		l/min
						40°		20,5