





Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
 Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
 Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
 Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb
 / Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
 Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu

XX = AA, AD...

Position


- 1 = A 962 010 XX
- 2 = A 962 011 XX
- 3 = A 962 261 NU
- 4 = A 962 267 XX
- 6 = A 962 105 NU
- 7 = F 960 017 NU
- 10 = A 962 268 NU (4x)
- 11 = A 961 326 NU (2x)
- 14 = A 962 269 NU
- 15 = A 963 495 NU (2x)
- 16 = A 962 270 NU
- 17 = A 962 271 XX
- 18 = B 960 568 XX
- 19 = A 962 272 XX

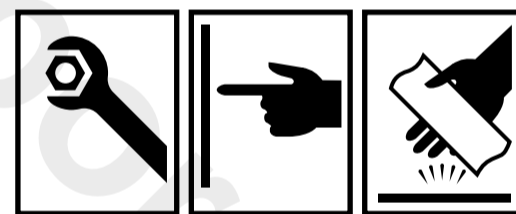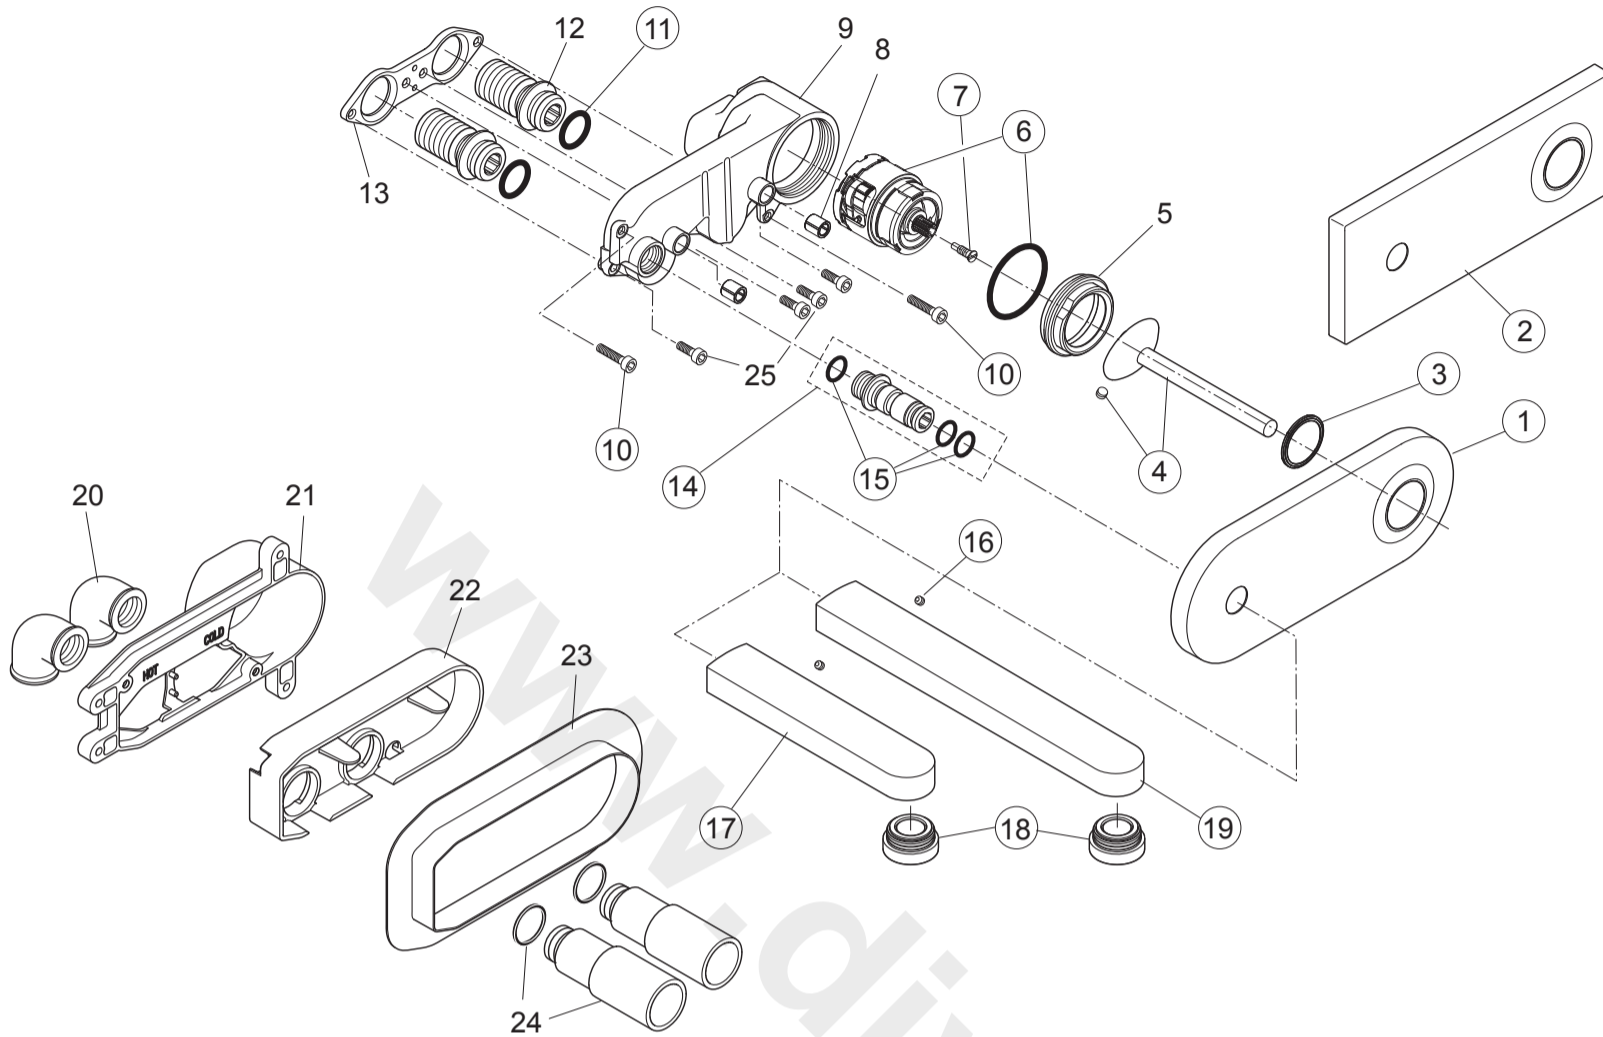

SIMPLY U


A 4480 .. A 4481 .. A 4482 .. A4483 ..



0811 / A 865 893
 (+ A 865 612)
 Made in Germany

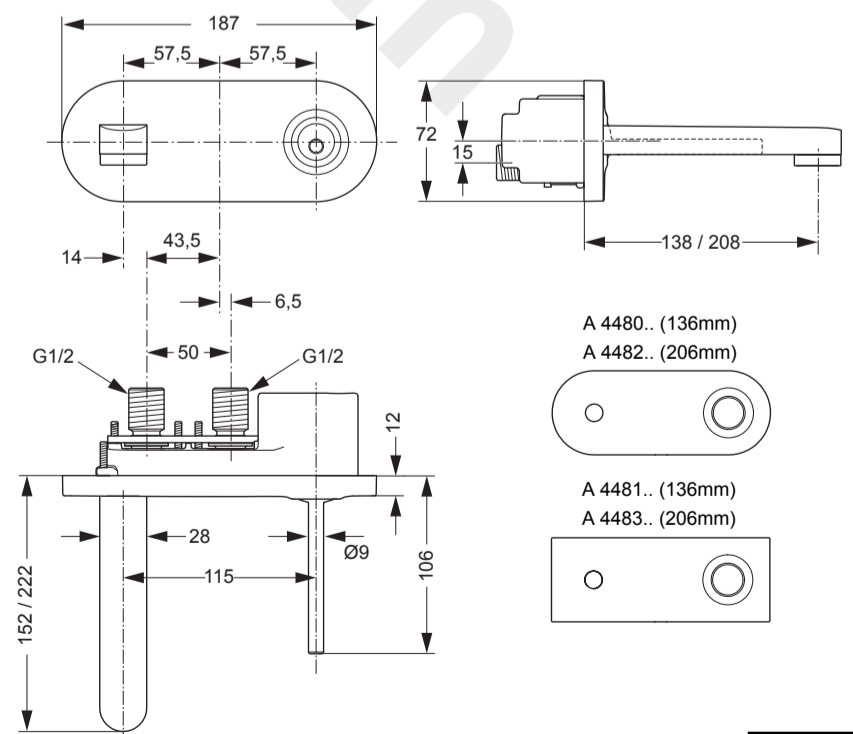

Ideal Standard International BVBA
 Chaussée de Wavre, 1789 - box 15
 1160 Bruxelles
 Belgium

www.idealstandardinternational.com

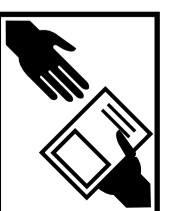

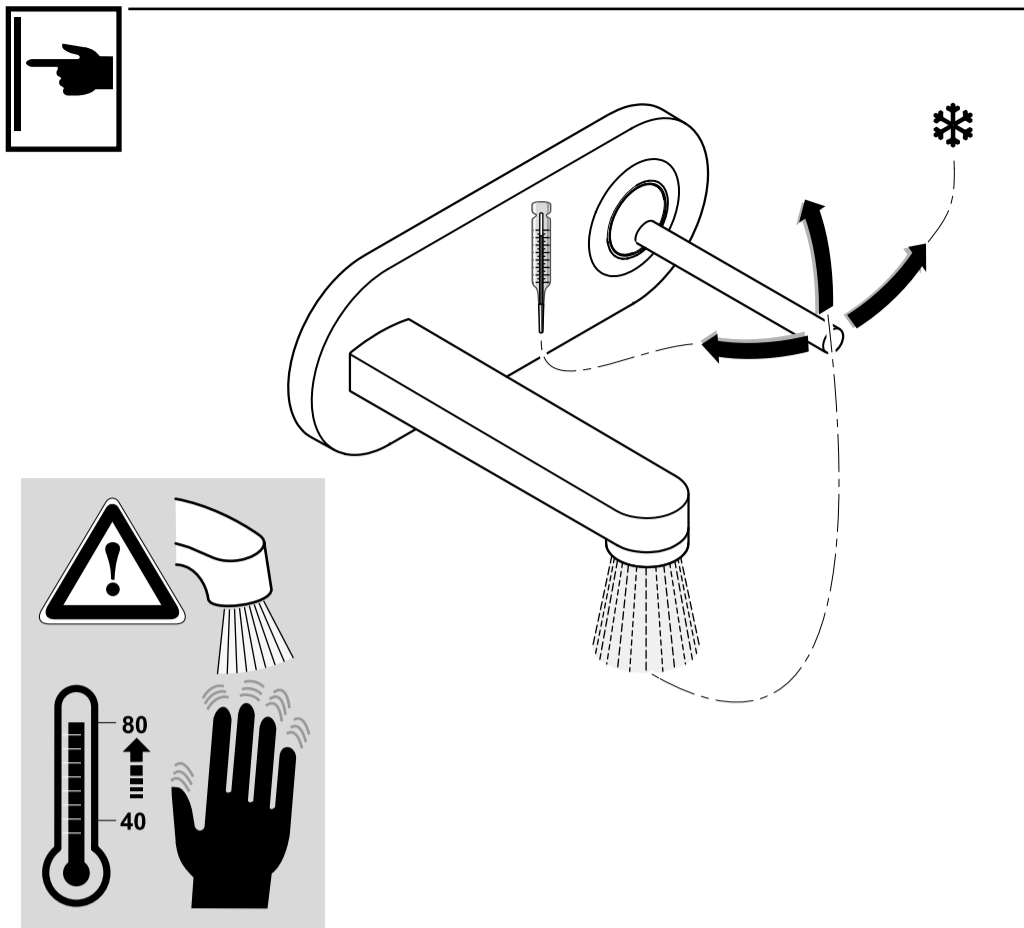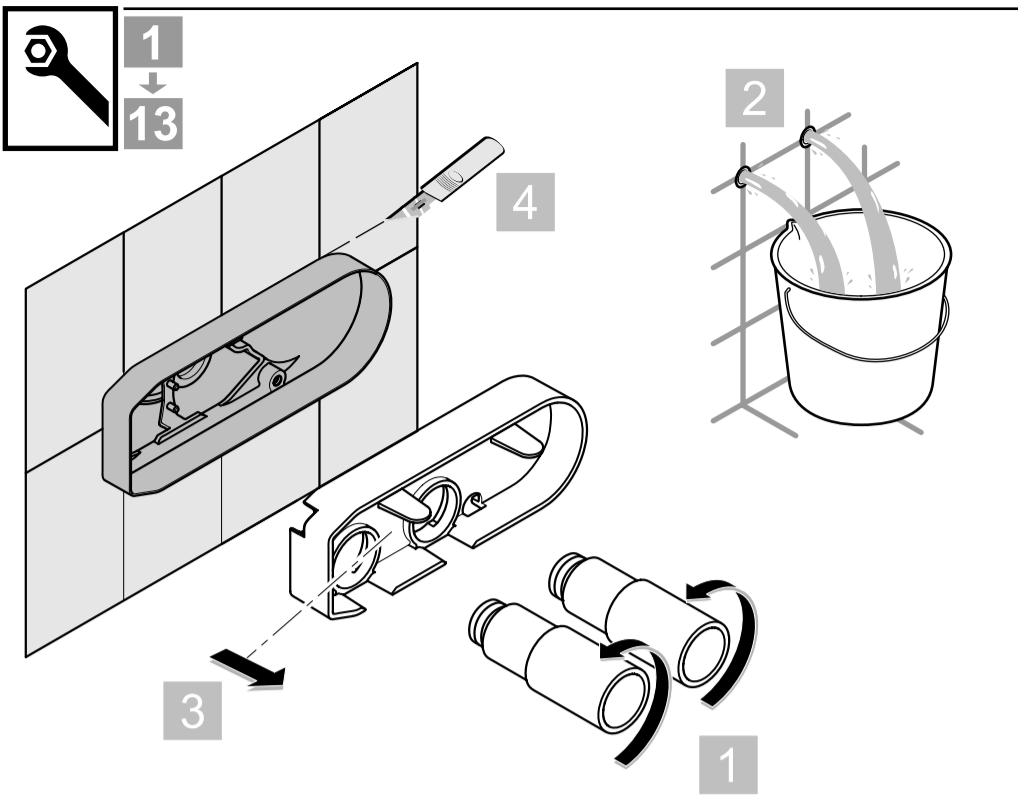

| | | | | | |
|--|--------------|--|--|--|---------------------|
| | P bar | | | | Q (3 bar) |
| | T °C | | | | l/min 13 |

