

BRISTAN

TAPS & SHOWERS

Installation Instructions & User Guide

Please leave these instructions
with the end user



Product Code: VT2 1/2 C (D1)

Specifications

Dynamic Water Pressure

Min: 0.2 bar


Max: 5.0 bar

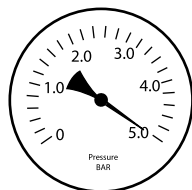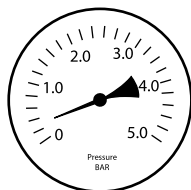

Maximum Static Pressure: 10.0 bar


Inlet Water Temperature

Cold Water Supply

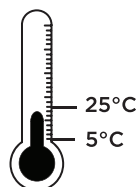


Min: 5°C Max: 25°C

Hot Water Supply

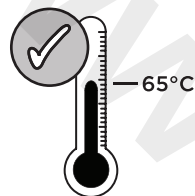


65°C Recommended

Inlet Connections

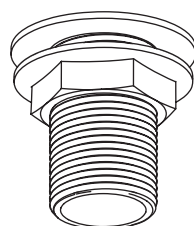

1/2" BSP


Tools You'll Need

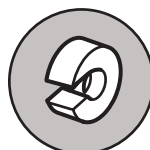

Pipe Cutter



Adjustable Spanner

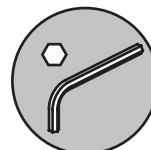

Hexagonal Keys

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of the Water Supply (Water Fittings) Regulations 1999 and current by-laws. For full Installation Requirements & Notes (IRN) please visit www.wras.co.uk/directory.

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc.


This product must not be modified in any way as this will invalidate the guarantee.

Full access must be made available for future maintenance/servicing purposes.


If in doubt, contact a registered plumber or your Local Water Authority or the Secretary of the Institute of Plumbing, address as follows:-

The Institute of Plumbing,
64 Station Lane,
Hornchurch,
Essex,
RM12 6NB, Tel: 01708 472791


Pack Contents

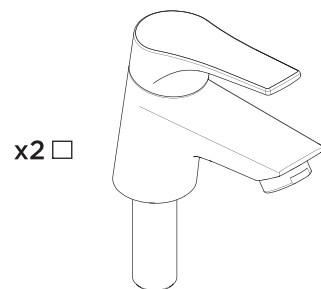

x2

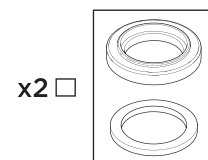

x2

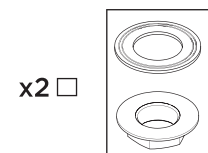

x2


Spare Parts

To replace any spare parts
for your tap, why not
scan the QR Code or
visit www.bristan.com
and search for your product.




Installation

1

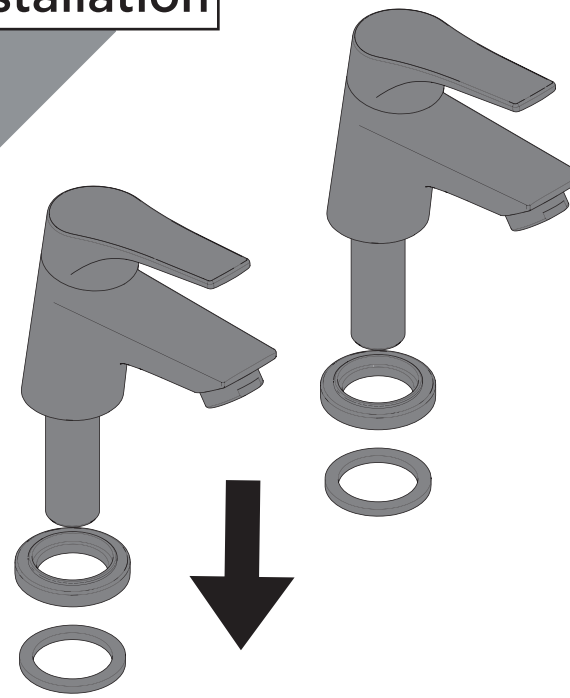

Fit the taps to the basin, ensuring
the plinth is in place.

2

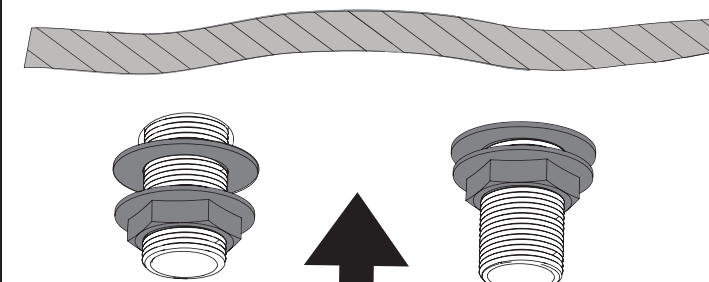

Secure the taps to the basin by
using the washer and metal
backnut below the basin.




Servicing Your Tap

We recommend servicing your tap at least once every year to prolong its life. To see a video showing how to remove the cartridge for servicing, scan the QR code with your smart phone or tablet.


Alternatively visit www.youtube.com/BristanTV



3

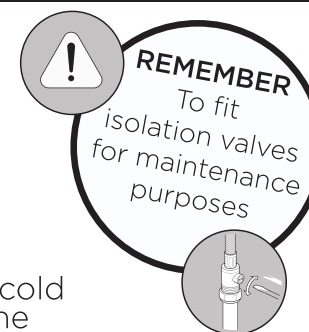



Connect the hot and cold
water supplies to the
threaded tails.

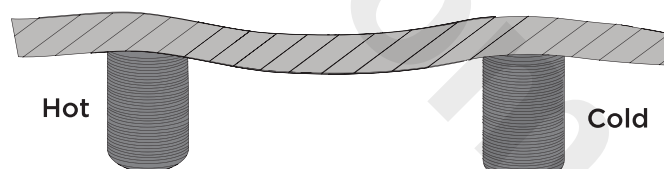

Hot

Cold

4

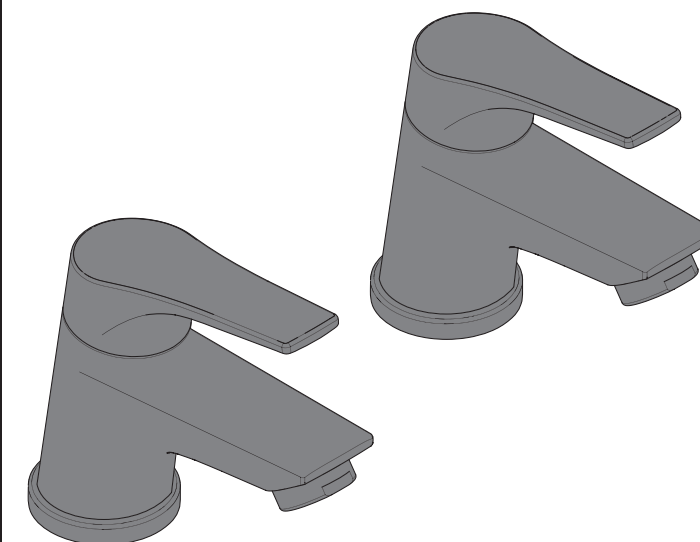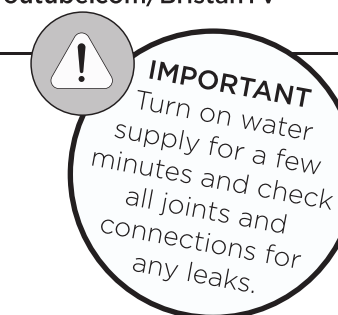


Turn on the water supply.

Operation

General Cleaning

Troubleshooting

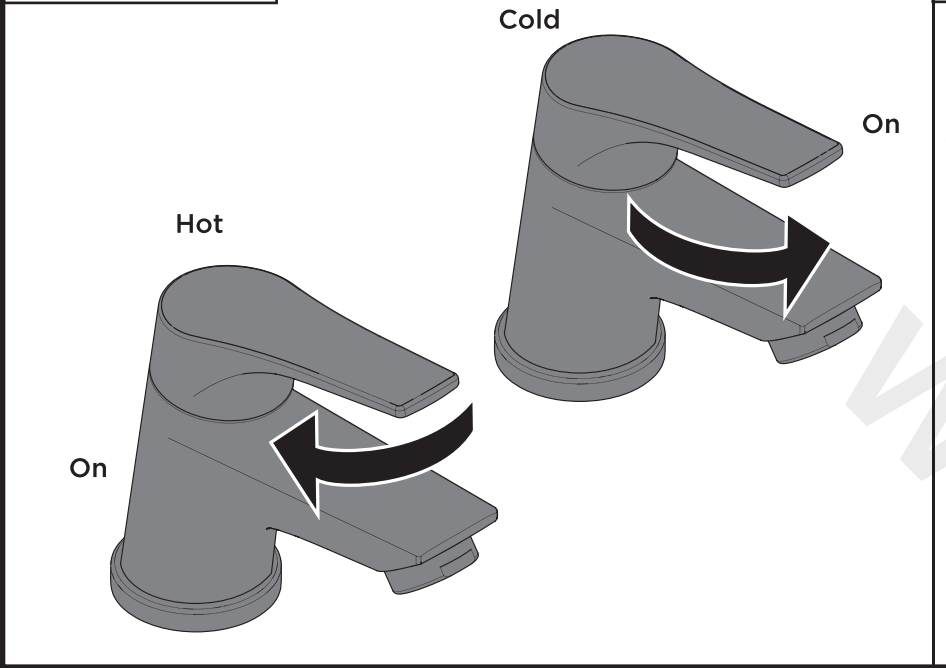

Bristan products are made from premium materials, with hand polishing and electroplated finishes.


Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on spouts.

Symptom	Cause	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Increase water flow rate or pressure through system.
	Head of water is below the minimum distance required.	Refer to specification for minimum distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
Water dripping from taps	Airlock or partial blockage in the supply pipework.	Flush through pipework to ensure removal of debris and any airlocks.
	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
Taps do not turn on	If water continues to drip, possibly due to the ceramic disc valves	Remove valves and clean, refer to 'Maintenance' section before starting any maintenance.
	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

Maintenance - Clean/Replace Outlet

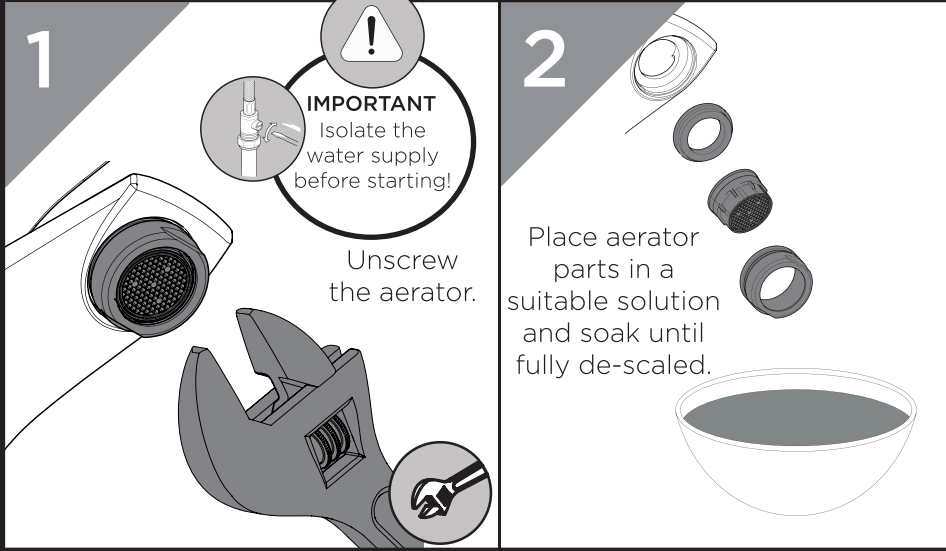

3

Reverse the maintenance steps to replace the aerator.

1 2 3


Spare Parts

To replace any spare parts for your tap, why not scan the QR Code or visit www.bristan.com and search for your product.

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

Maintenance - Cartridge Cleaning

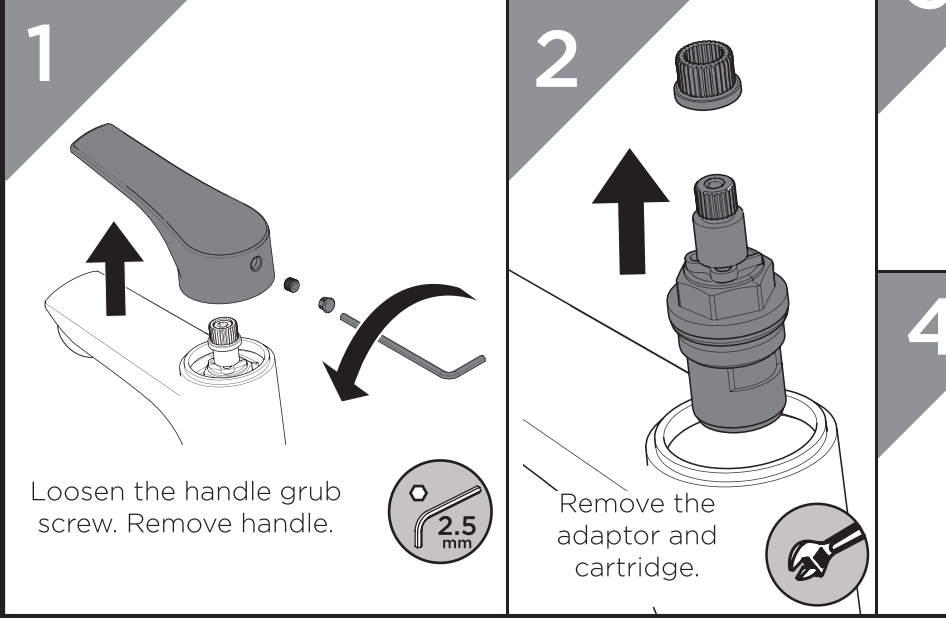

3

Place cartridge in a suitable solution and soak until fully de-scaled.

4

Reverse the maintenance steps to replace the handle.

1 2 3

The diagram shows two steps. Step 3: A cartridge is being placed into a bowl of cleaning solution. Text says 'Place cartridge in a suitable solution and soak until fully de-scaled.' Step 4: The handle is being reattached to the tap body. Text says 'Reverse the maintenance steps to replace the handle.'

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register to register your product via a computer.

For full guarantee terms and conditions visit www.bristan.com/guarantees.



We Know & We Care