

Fitting instruction
Montageanleitung
Monteringsvejledning
Monteringsvægledning
Montage hanleiding
Manuel de montage




T60:



T68:



T65:

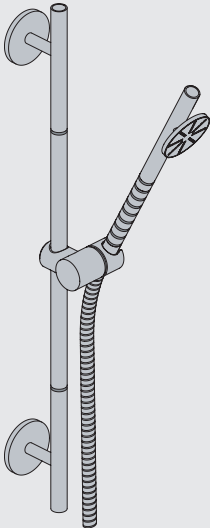

1

T60

28 mm
1 1/8"

55 mm
2 1/8"

Ø17 mm
Ø11/16"

290 mm
11 3/8"

1500 mm
5'

G1/2"

Ø60 mm
Ø2 3/8"

2

T68

Ø43 mm
Ø1 3/4"

40 mm
1 5/8"

SILICONE

Ø6 mm
1/4"

25 mm
1"

001G

T8 → T68

3

T65

50 mm
2"

50 mm
2"

55 mm
2 1/8"

Ø60 mm
Ø2 3/8"

490 mm
19 1/4"

590 mm
23 1/4"

690 mm
27 1/8"

790 mm
31"

900 mm
35 3/8"

600 mm
23 5/8"

700 mm
27 1/2"

800 mm
31 1/2"

Data	Bar:	1	2	3	4	5
T60	(l/min) (Gal/min)	6.9 1.8	9.8 2.6	12 3.2	14 3.7	15 4.1
	Max. 65°C. 150°F					

Service - VR556

Bathtub
Badewanne

Badekar
Badkar

Badkuip
Baignoire

T68



Min. 350 mm
Min. 14"

070



Min. 200 mm
Min. 8"

40 mm
1 5/8"




4

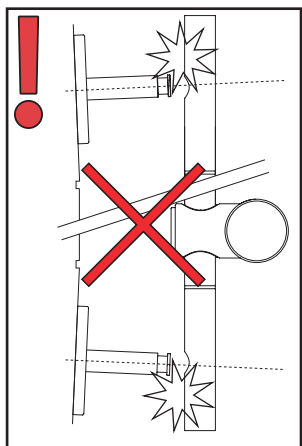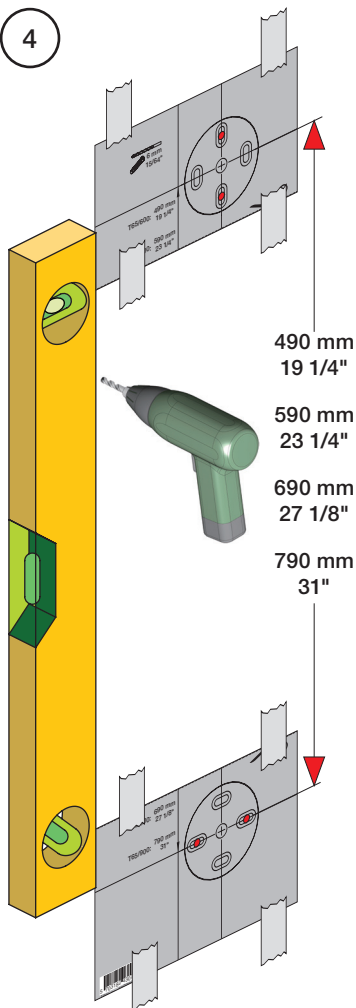

5

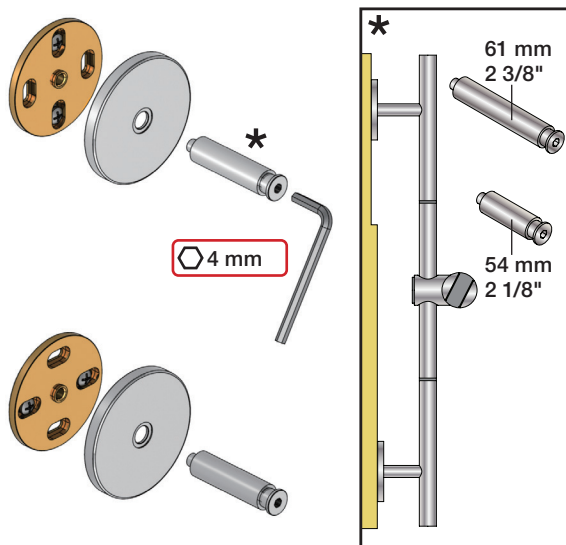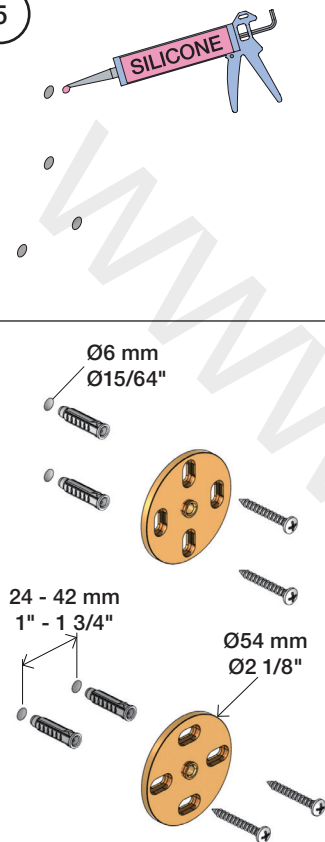


6

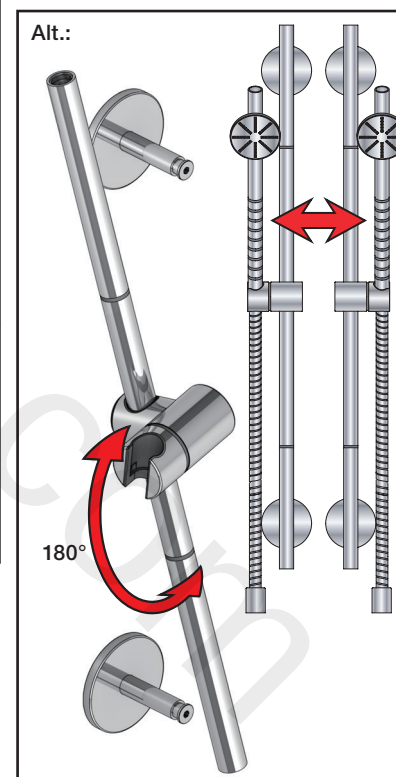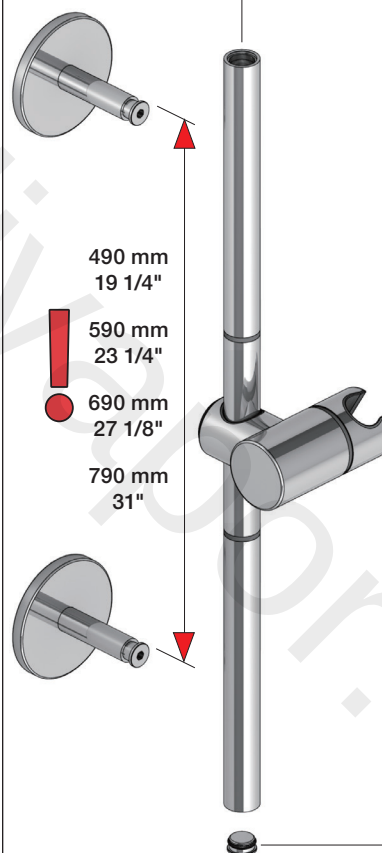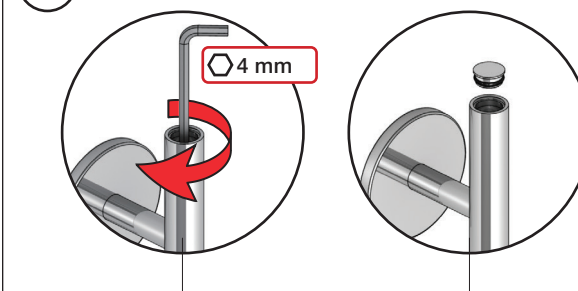


7




8

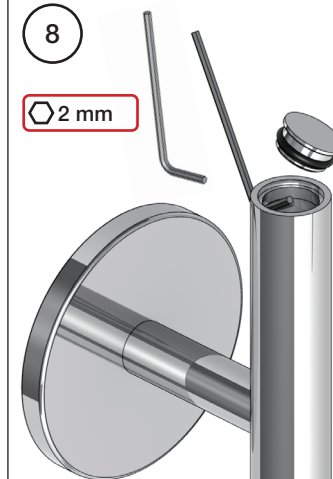

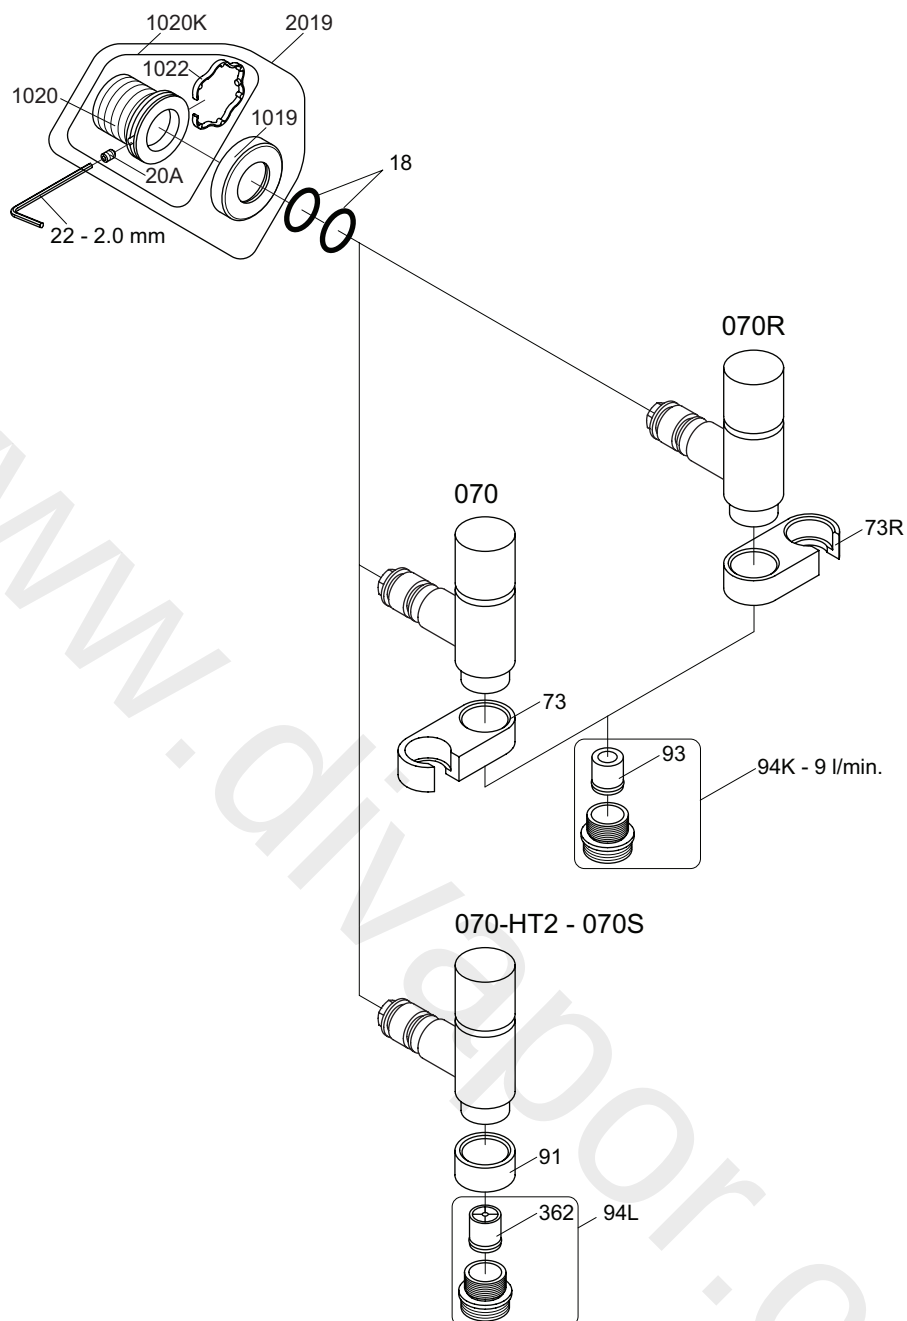

VR1020K: VR20A, VR22, VR1020, VR1022
 VR2019: VR20A, VR22, VR1019, VR1020, VR1022

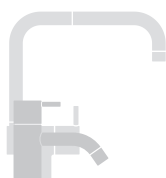

vola
 Lunavej 2
 DK-8700 Horsens
 Tlf : + 45 7023 5500
 sales@vola.com
 www.vola.com

**VOLA 070, 070R
 070-HT2**

Date
 Apr. 21

Rev.
 5

Sheet
 SB 16