


VOLA 600, 700, 700V, 900, 1500
VOLA 800, 800V, 800N, 800NV, 800T, 800TV
VOLA S20V, S40V

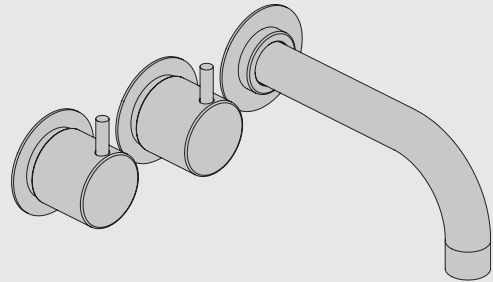



Fitting instruction Monteringsvægledning
Montageanleitung Montage hanleiding
Monteringsvejledning Manuel de montage

1500: GODKENDT TIL DRIKKEVAND



www.vola.com
600_V3_40998507
12-06-2023
 5 705230 290027

	L	L1	L2	H	H1	D
S20V	276 mm 10 7/8"	160 mm 6 1/4"	168 mm 6 5/8"	95 mm 3 3/4"	186 mm 7 3/4"	70 mm 2 3/4"
S40V, 900	377 mm 14 3/4"	260 mm 10"	268 mm 10"			
600, 700V, 800V, 1500	475 mm 18 3/4"	355 mm 14"	367 mm 14 1/2"			
80NV, 800TV	552 mm 21 3/4"	435 mm 17"	447 mm 17 5/8"			

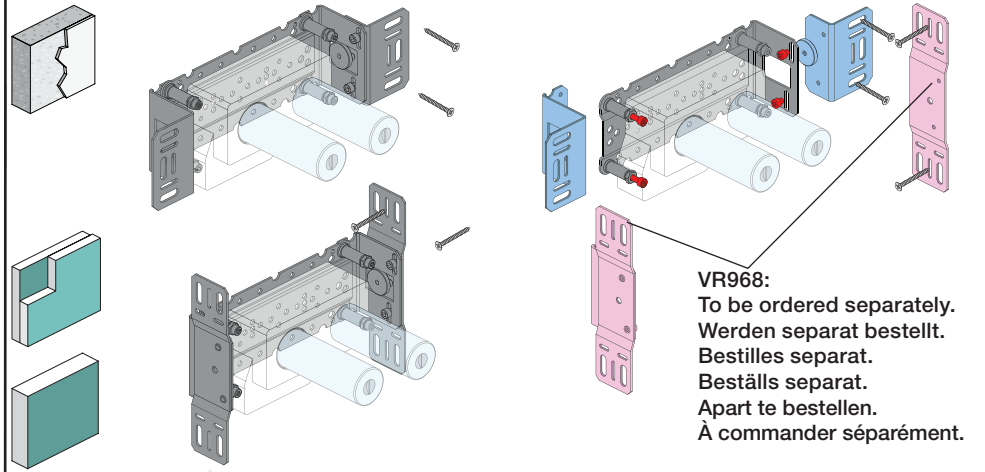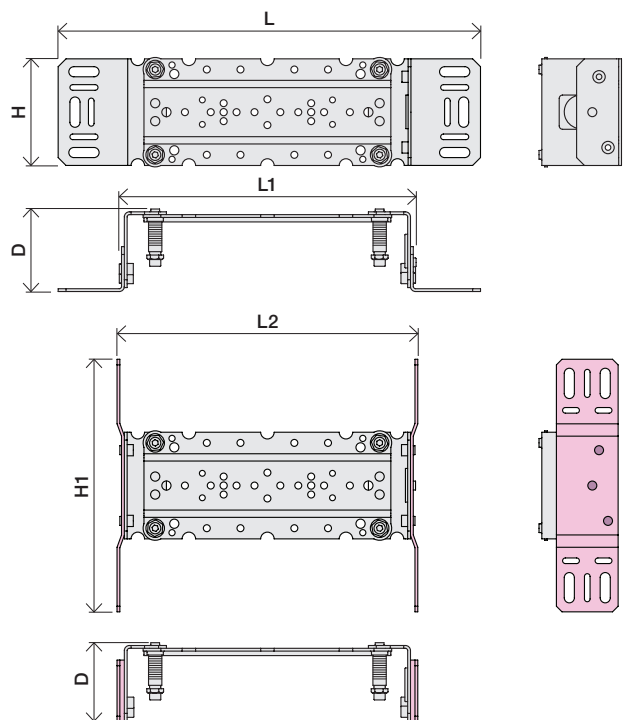

VR968:
To be ordered separately.
Werden separat bestellt.
Bestilles separat.
Apart te bestellen.
À commander séparément.

A	Max.: 10 Bar/145 psi	Data, 3 Bar/43.5 Psi:	
	Max. 65°C, 150°F	Max: l/min.	Gal/min.
		600: 65	17.2
		700V: 65	17.2
		800V: 34	9.0
		900: 30	8.0
		1500: 65	17.2

Data, l/min. / (Gpm) 3 Bar/43.5 Psi:

B Check the local legislation.
Bitte die örtlichen Vorschriften überprüfen.
Tjek de lokale regler.
Kontrollera lokala föreskrifter
Nazitten lokale regelgeving.
Vérifiez la législation locale.

**!DO NOT!
!REMOVE!**

C DE:
Bitte separat beiliegende Anleitung für die Schallentkopplung VR972 beachten


D
Box till inbyggnadsblandare.
Boks til indbygningsblander.
Laatikko seinäasenteiselle sekoittajalle.

Ingår inte i leveransen, köps separat.
Ikke inkludert, kjøpes separat.
Eivät sisälly tilaukseen, ostettava erikseen.

Extension
Verlängerung
Forlængerdele
Förlängning
Aanpassing
Modification

STD	+10	+20
+30	+40	+50


VR697 600, 700V, 800V: 2xVR697
VR698 1500: 1xVR697+1xVR698
 900: 1xVR697

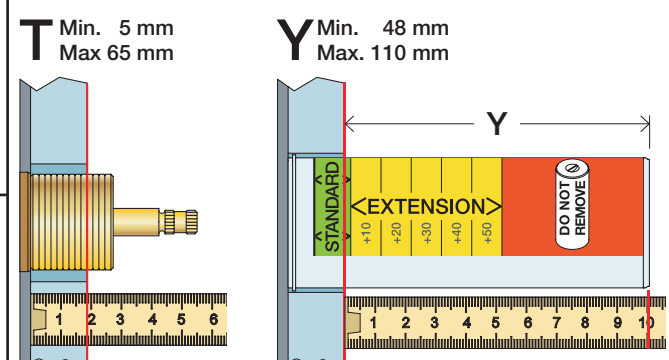

	T	Y	VR697/VR1400/VR2019
	5 - 15 mm	110 - 98 mm	Std.
	15 - 25 mm	98 - 88 mm	+10
	25 - 35 mm	88 - 78 mm	+20
	35 - 45 mm	78 - 68 mm	+30
	45 - 55 mm	68 - 58 mm	+40
	55 - 65 mm	58 - 48 mm	+50

Fitting of extension
Montage von verlängerung
Montering af forlængerdele
Montering av förlängning

Extension, retrofit
Verlängerung, nachträglicher Einbau
Forlængerdele, eftermontering
Förlängning, eftermontering
Aanpassing na montage
Modification après installation









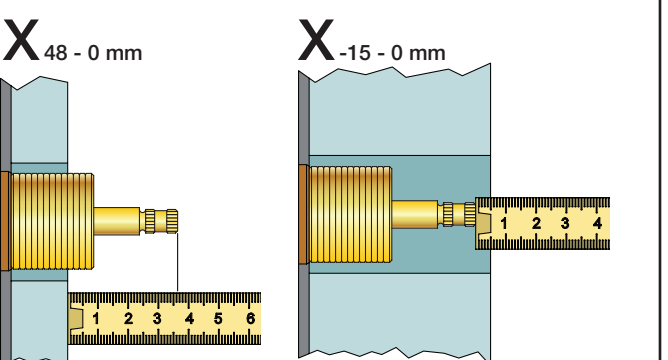


	X	VR697/VR1400/VR2019
	36 - 50 mm	Std.
	26 - 36 mm	+10
	16 - 26 mm	+20
	6 - 16 mm	+30
	-4 - 6 mm	+40
	-14 - -4 mm	+50

Montage van de verlengstukken
Montage des rallonges

VR697+ VR2019+, VR2119+

VR1400+ 400-2400

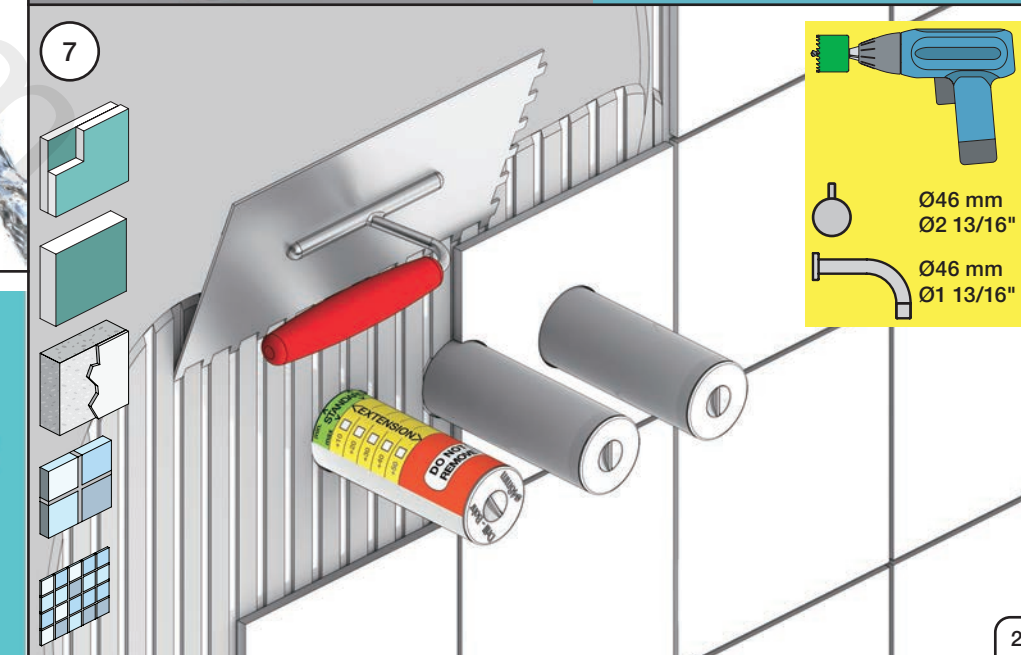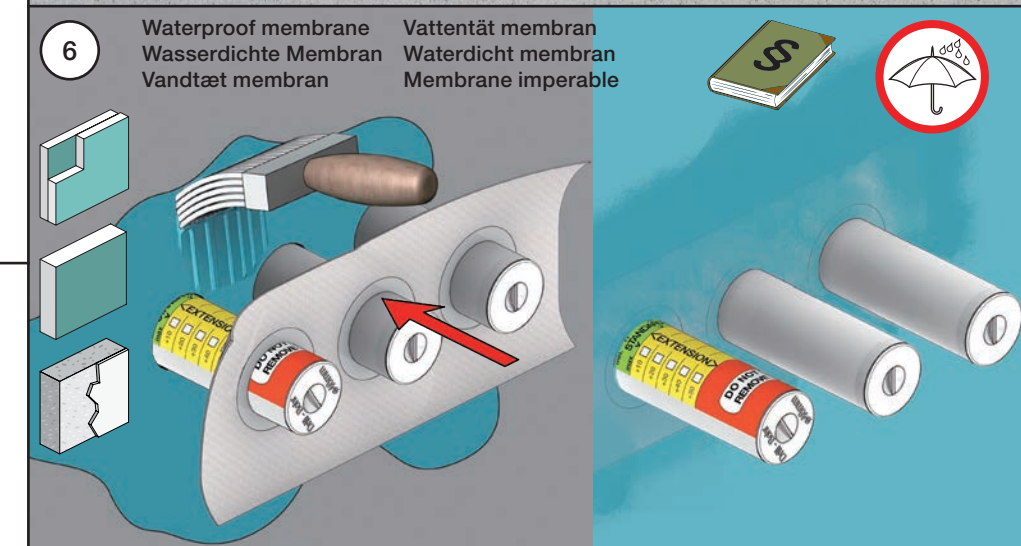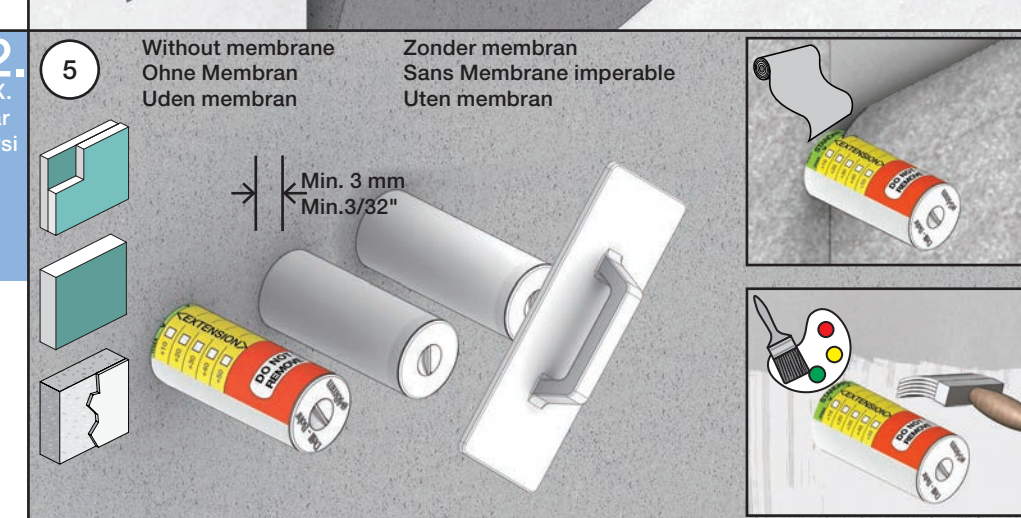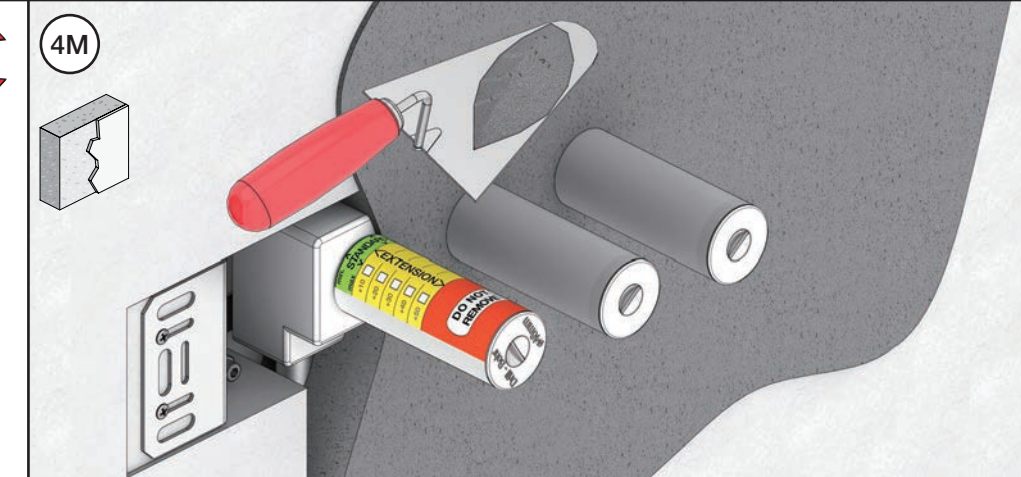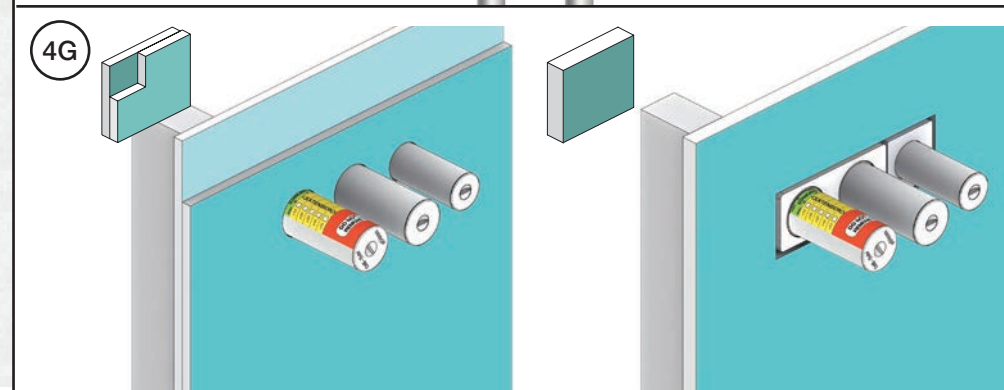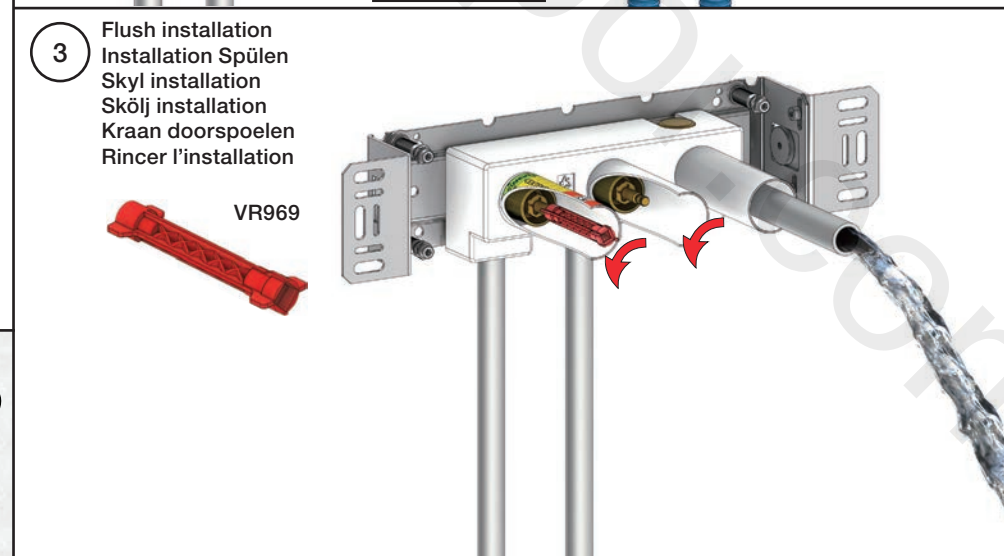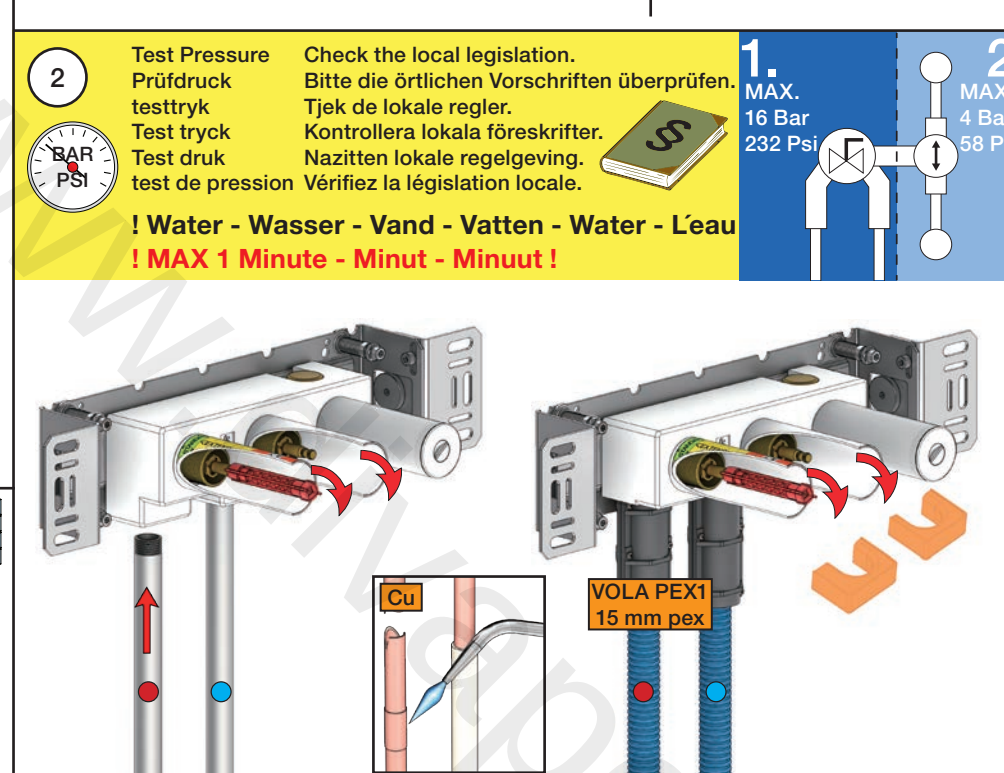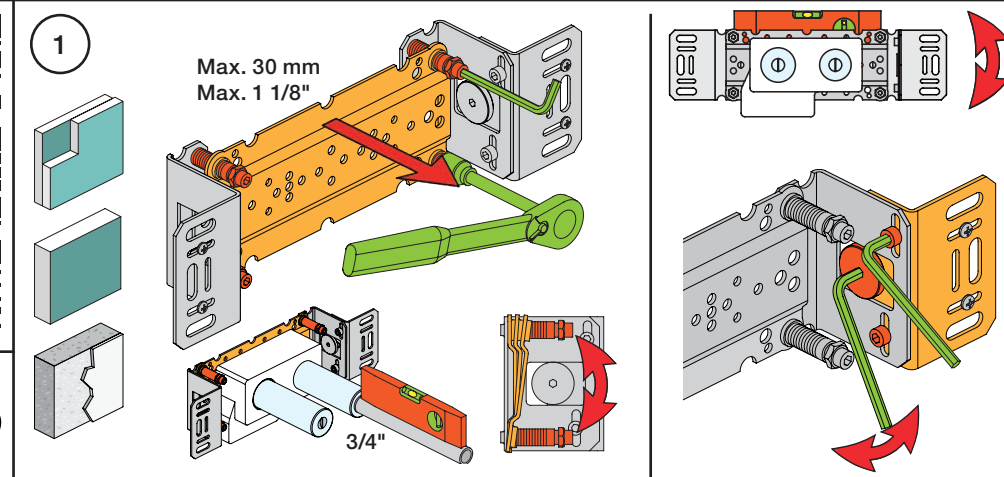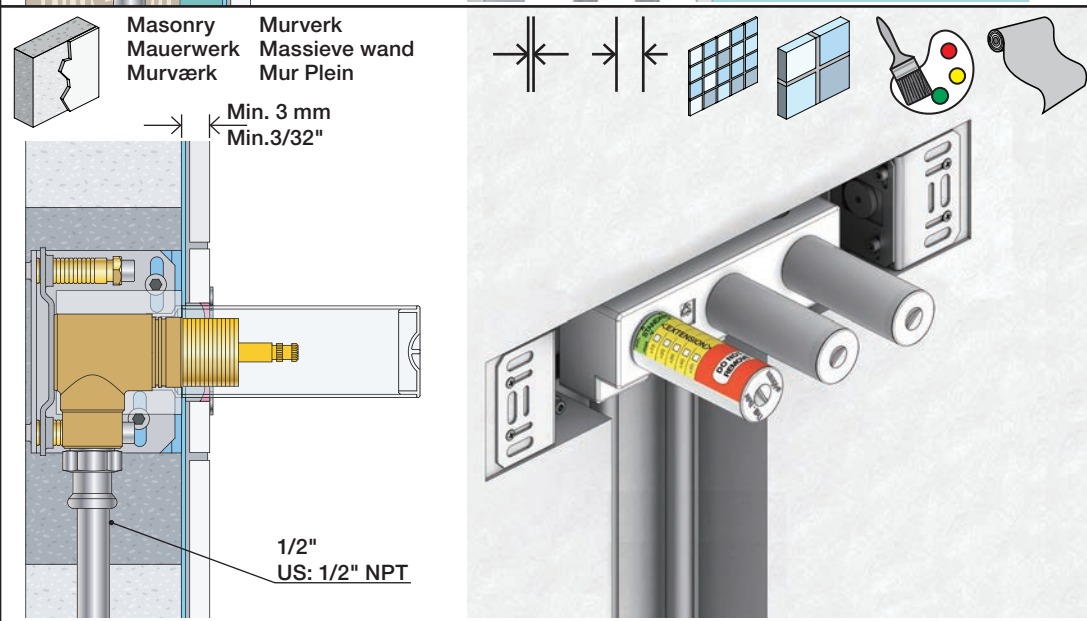



Do not cut the membrane
Die Membran nicht schneiden
Skær ikke membranen
Skär inte membranet
Snij het membraan niet door
Ne coupez pas la membrane
No cortar la membrana

NR.17:


1

NR.19:


2

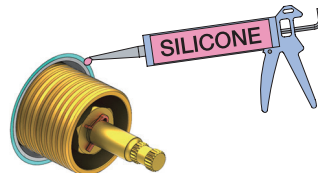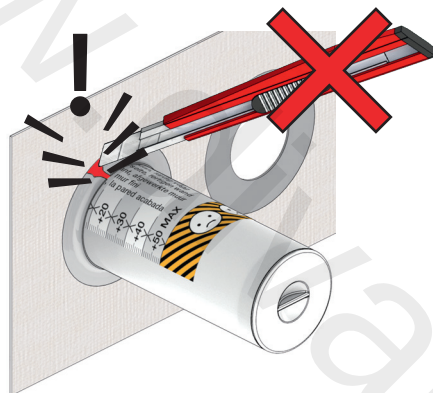


NR 17

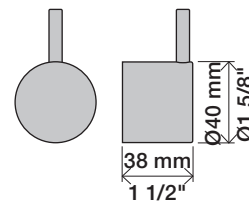

NR 17 - 1

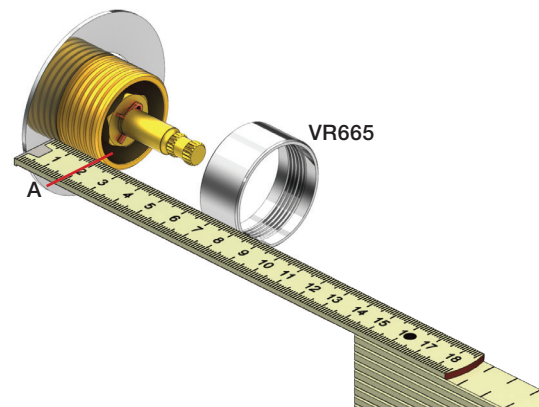


NR 17 - 2

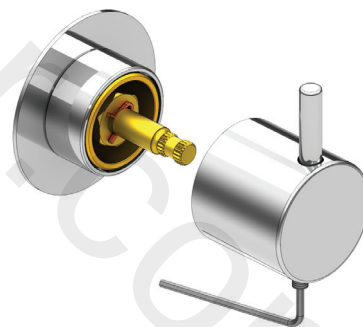


2 mm

1


NR 19

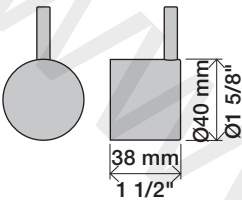


NR 19 - 1

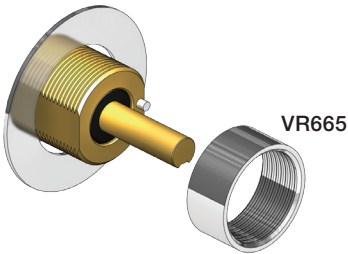

NR 19 - 2


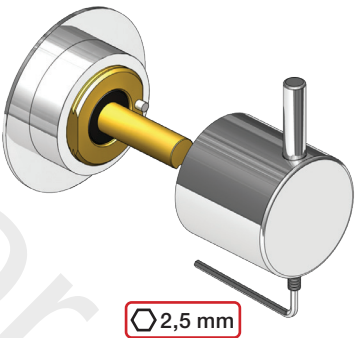


600

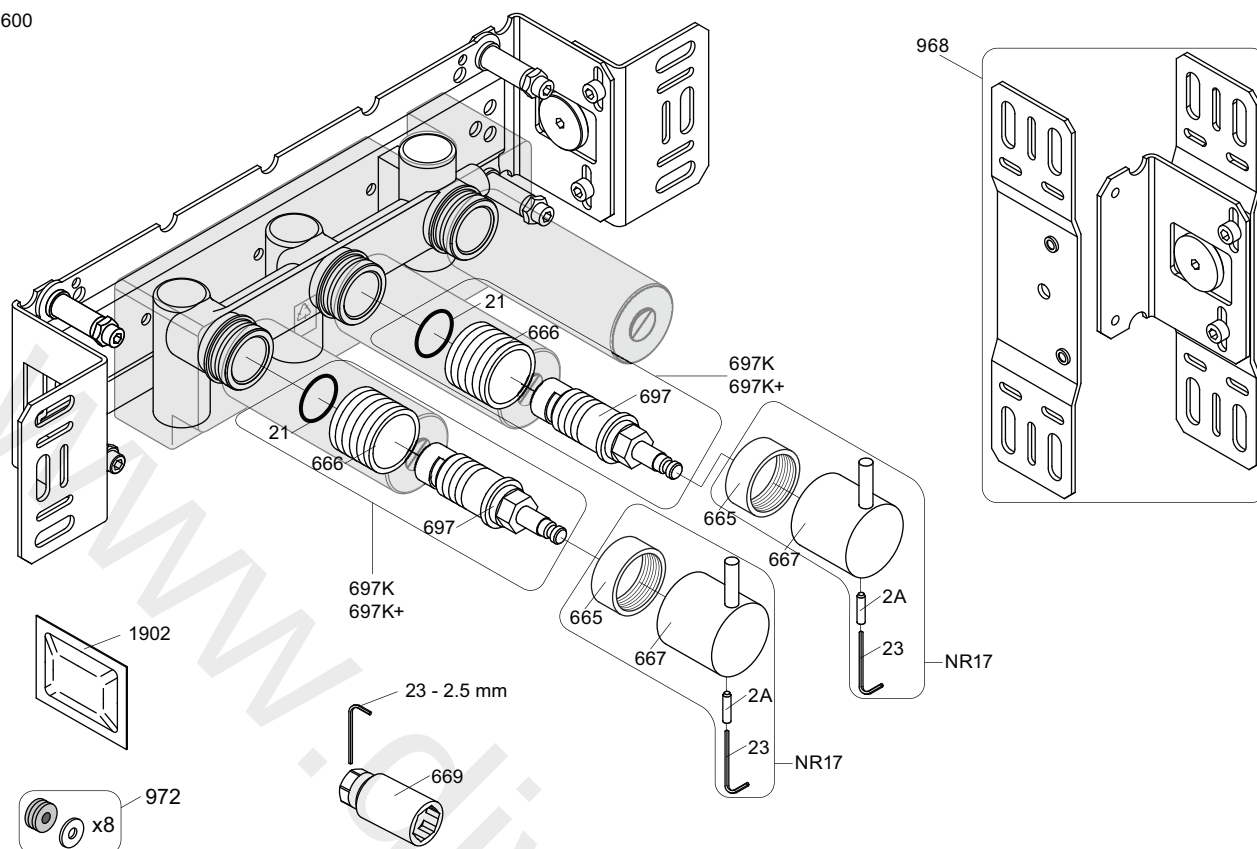

NR17: VR2A, VR23, VR665, VR667
 VR697K: VR21, VR23, VR666, VR669, VR697

900


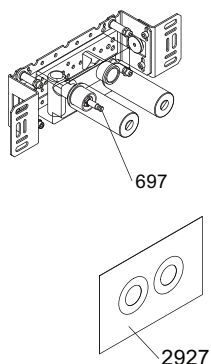


002



001, 001G

700V


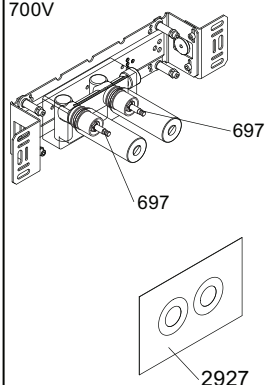


1034




2x001G


600

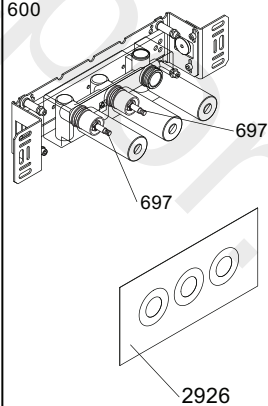

003K



001, 2x001G

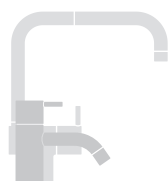


vola
 Lunavej 2
 DK-8700 Horsens
 Tlf : + 45 7023 5500
 sales@vola.com
 www.vola.com

VOLA 600
 700V, 900, 1500


Date
 May. 22

Rev.
 4

Sheet
 SB 5.3

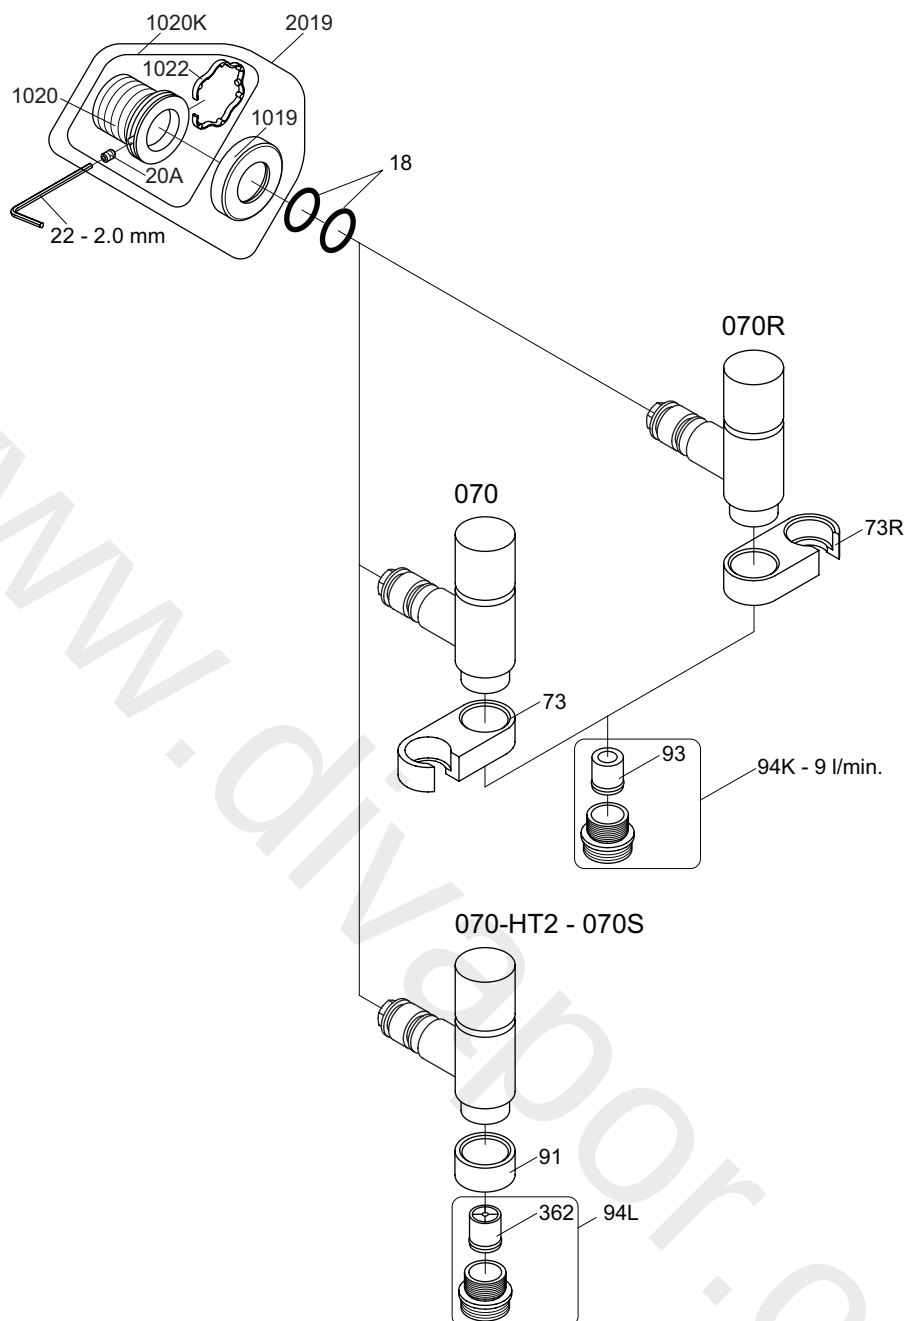

VR1020K: VR20A, VR22, VR1020, VR1022
 VR2019: VR20A, VR22, VR1019, VR1020, VR1022

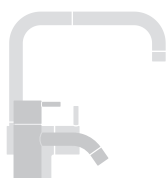

vola
 Lunavej 2
 DK-8700 Horsens
 Tlf : + 45 7023 5500
 sales@vola.com
 www.vola.com

**VOLA 070, 070R
 070-HT2**

Date
 Apr. 21

Rev.
 5

Sheet
 SB 16