


INSTALLATION DIMENSION

ROUND SHOWER COLUMN WITH ADJUSTABLE HEIGHT

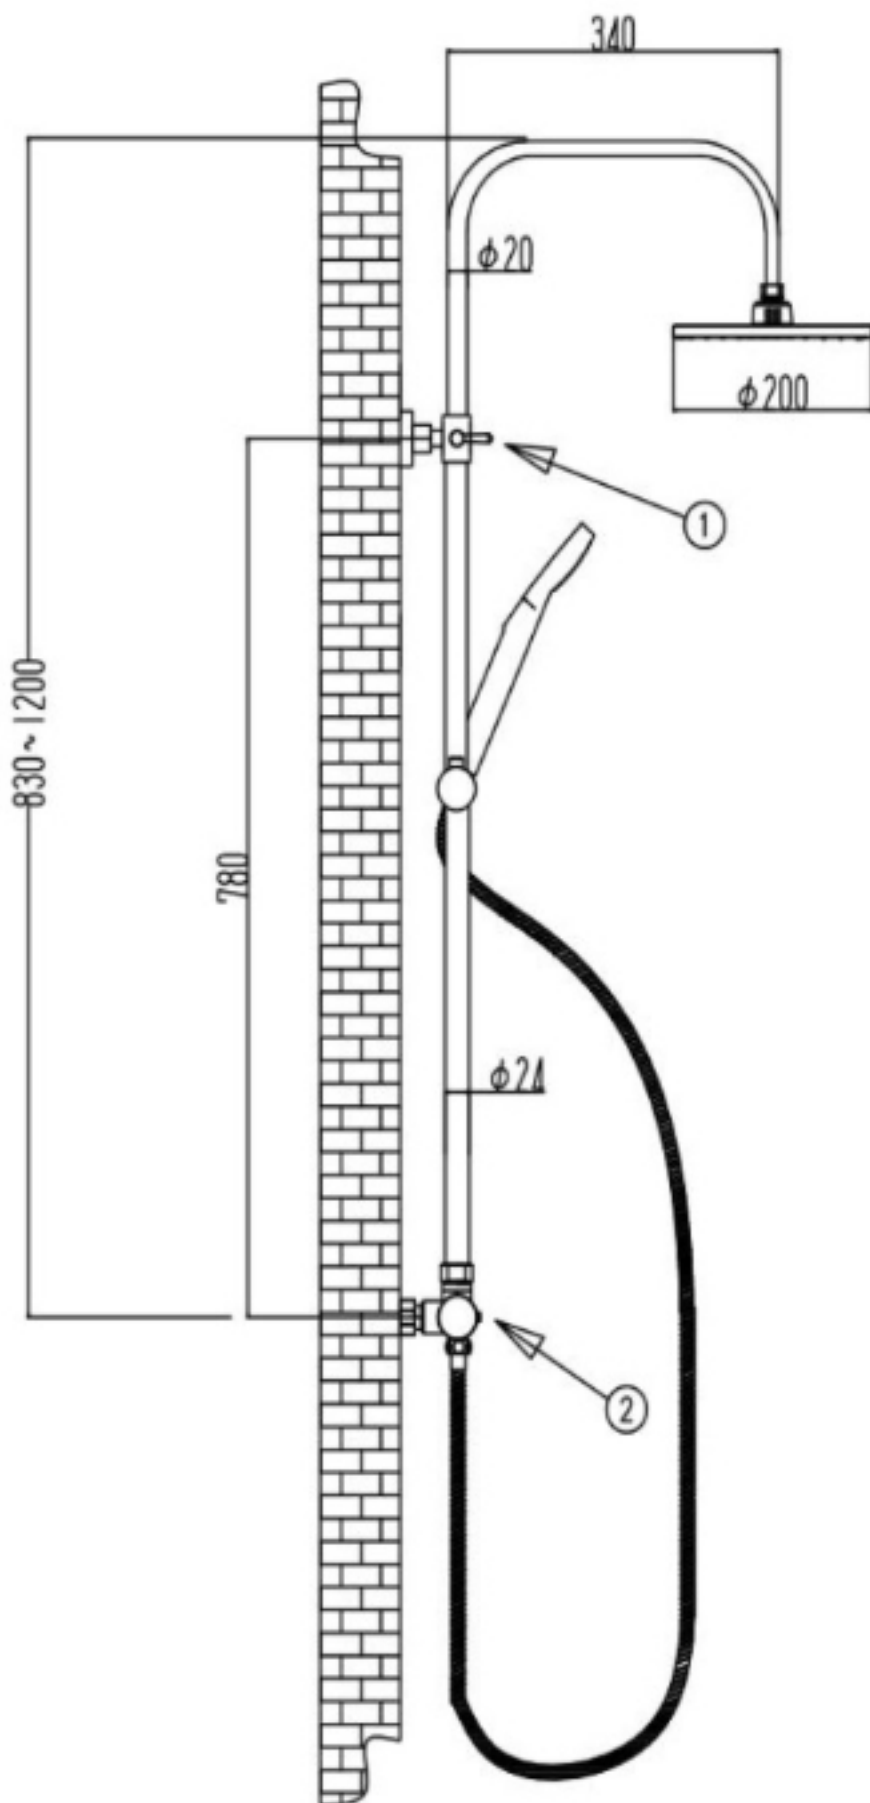

ASSEMBLY STEPS

1. Mark out the size of the fixing wall base on the wall according to the installed hole of the faucet ① and refer to left plan
2. Assemble the whole shower column to compare all size on the wall and adjust appropriate height for the shower tube
3. Burrow in the wall for the fixing wall base, install the fixing wall base with screw ①
4. Install the faucet ②
 - Flush the pipeline & no any dirt in pipeline
 - Bind the G1/2 Side of the connector by the PTFE Tape
 - Install the connector in the joints of the pipeline and adjust the demenstion of the connectors
 - Put the wall cover on the connectors
 - Put gasket in hexagonalnut of the faucet
 - Fix the faucet on connector, Faucet connection: warm-left/ cold -right
5. Connect whole shower tube with Shower slide
6. Connect the shower hose with hand shower
7. Connect the shower head